

# Samsung GALAXY Note<sup>®</sup> Edge

---

S M A R T P H O N E

## User Manual

Please read this manual before operating your device  
and keep it for future reference.



# Legal Notices

---

**Warning:** This product contains chemicals known to the State of California to cause cancer and reproductive toxicity.

## Intellectual Property

All Intellectual Property, as defined below, owned by or which is otherwise the property of Samsung or its respective suppliers relating to the SAMSUNG Phone, including but not limited to, accessories, parts, or software relating there to (the “Phone System”), is proprietary to Samsung and protected under federal laws, state laws, and international treaty provisions. Intellectual Property includes, but is not limited to, inventions (patentable or unpatentable), patents, trade secrets, copyrights, software, computer programs, and related documentation and other works of authorship. You may not infringe or otherwise violate the rights secured by the Intellectual Property. Moreover, you agree that you will not (and will not attempt to) modify, prepare derivative works of, reverse engineer, decompile, disassemble, or otherwise attempt to create source code from the software. No title to or ownership in the Intellectual Property is transferred to you. All applicable rights of the Intellectual Property shall remain with SAMSUNG and its suppliers.

### *Open Source Software*

Some software components of this product incorporate source code covered under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), OpenSSL License, BSD License and other open source licenses. To obtain the source code covered under the open source licenses, please visit: <http://opensource.samsung.com>.

## Disclaimer of Warranties; Exclusion of Liability

EXCEPT AS SET FORTH IN THE EXPRESS WARRANTY CONTAINED ON THE WARRANTY PAGE ENCLOSED WITH THE PRODUCT, THE PURCHASER TAKES THE PRODUCT “AS IS”, AND SAMSUNG MAKES NO EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT, INCLUDING BUT NOT LIMITED TO THE MERCHANTABILITY OF THE PRODUCT OR ITS FITNESS FOR ANY PARTICULAR PURPOSE OR USE; THE DESIGN, CONDITION OR QUALITY OF THE PRODUCT; THE PERFORMANCE OF THE PRODUCT; THE WORKMANSHIP OF THE PRODUCT OR THE COMPONENTS CONTAINED THEREIN; OR COMPLIANCE OF THE PRODUCT WITH THE REQUIREMENTS OF ANY LAW, RULE, SPECIFICATION OR CONTRACT PERTAINING THERETO. NOTHING CONTAINED IN THE INSTRUCTION MANUAL SHALL BE CONSTRUED TO CREATE AN EXPRESS OR IMPLIED WARRANTY OF ANY KIND WHATSOEVER WITH RESPECT TO THE PRODUCT. IN ADDITION, SAMSUNG SHALL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND RESULTING FROM THE PURCHASE OR USE OF THE PRODUCT OR ARISING FROM THE BREACH OF THE EXPRESS WARRANTY, INCLUDING INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES, OR LOSS OF ANTICIPATED PROFITS OR BENEFITS.

### *Modification of Software*

SAMSUNG IS NOT LIABLE FOR PERFORMANCE ISSUES OR INCOMPATIBILITIES CAUSED BY YOUR EDITING OF REGISTRY SETTINGS, OR YOUR MODIFICATION OF OPERATING SYSTEM SOFTWARE.

USING CUSTOM OPERATING SYSTEM SOFTWARE MAY CAUSE YOUR DEVICE AND APPLICATIONS TO WORK IMPROPERLY. YOUR CARRIER MAY NOT PERMIT USERS TO DOWNLOAD CERTAIN SOFTWARE, SUCH AS CUSTOM OS.

IF YOUR CARRIER PROHIBITS THIS, IF YOU ATTEMPT TO DOWNLOAD SOFTWARE ONTO THE DEVICE WITHOUT AUTHORIZATION, YOU WILL BE NOTIFIED ON THE SCREEN THAT THE PHONE WILL NO LONGER OPERATE AND BE INSTRUCTED TO POWER DOWN THE DEVICE. YOU MUST THEN CONTACT YOUR CARRIER TO RESTORE THE DEVICE TO THE CARRIER AUTHORIZED SETTINGS.

### *SAFE™ (Samsung For Enterprise)*

SAFE™: “SAFE™” (Samsung for Enterprise) is a mark for a Samsung device which has been tested against Samsung’s own internal criteria for interoperability with certain third party security-related solutions for MDM and VPN. The testing includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. During the testing, the device is tested with the security solutions to see if the solutions work with the device as described by the third party security solution providers. The testing, for example, includes field testing with local network connection and menu tree testing which tests functionality of the solutions in conjunction with the Samsung device. For more information about Samsung’s SAFE™ program, please refer to [www.samsung.com/us/safe](http://www.samsung.com/us/safe).

Disclaimer of Warranties: EXCEPT AS OTHERWISE PROVIDED IN THEIR STANDARD END USER LICENSE AND WARRANTY, TO THE FULL EXTENT PERMITTED BY LAW SAMSUNG ELECTRONICS CO., LTD., SAMSUNG TELECOMMUNICATIONS AMERICA, LLC, AND THEIR AFFILIATES (COLLECTIVELY REFERRED TO HEREIN AS THE “SAMSUNG ENTITIES”) EXPRESSLY DISCLAIM ANY AND ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, INTEROPERABILITY OR NON-INFRINGEMENT, WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES AND APPLICATIONS TESTED WITH SAFE™ DEVICES. IN NO EVENT SHALL THE SAMSUNG ENTITIES BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES OF ANY KIND WHATSOEVER WITH RESPECT TO INFORMATION TECHNOLOGY SECURITY PROTECTION, SAFE™ DEVICES OR APPLICATIONS TESTED WITH SAFE™ DEVICES. In addition, information technology

security protection will be affected by features or functionality associated with, among other things the e-mail platform, master data management, and virtual private network solutions selected by the software provider, solution provider or user. Choice of an e-mail, master data management, and virtual private network solution is at the sole discretion of the software provider, solution provider or user and any associated effect on information technology security protection is solely the responsibility of the software provider, solution provider or user. For complete statement of limited warranty, please refer to [www.samsung.com/us/safe](http://www.samsung.com/us/safe), available on the web and where Samsung smartphones and mobile devices are sold. [091714]

## **Samsung Telecommunications America (STA), LLC**

### **Headquarters:**

1301 E. Lookout Drive  
Richardson, TX 75082

1-800-SAMSUNG (726-7864)  
1-888-987-HELP (4357)

### **Internet Address:**

[www.samsung.com](http://www.samsung.com)

©2014 Samsung Telecommunications America, LLC. Samsung, Galaxy, Galaxy Note, S Pen, Multi window, and S Health are registered trademarks of Samsung Electronics Co., Ltd.

### *Do you have questions about your Samsung Mobile Phone?*

For 24 hour information and assistance, we offer a new FAQ/ARS System (Automated Response System) at: [www.samsung.com/us/support](http://www.samsung.com/us/support)

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device.

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

The Bluetooth® word mark, figure mark (stylized “B Design”), and combination mark (Bluetooth word mark and “B Design”) are registered trademarks and are wholly owned by the Bluetooth SIG.

microSD™ and the microSD logo are Trademarks of the SD Card Association.

Google, the Google logo, Android, the Android logo, Google Play, Gmail, Google Hangouts, Google Maps, Google Music, Play Newsstand, Picasa, YouTube, and other marks are trademarks of Google Inc.

Wi-Fi is a registered trademark of the Wireless Fidelity Alliance, Inc.

### *Online Legal Information*

The online version of the Health/Safety and Warranty guide for your device can be found at:

#### **English**

[www.samsung.com/us/Legal/Phone-HSGuide](http://www.samsung.com/us/Legal/Phone-HSGuide)

#### **Spanish**

[www.samsung.com/us/Legal/Phone-HSGuide-SP](http://www.samsung.com/us/Legal/Phone-HSGuide-SP)

The online version of the **End User Licensing Agreement** for your device can be found online at:  
[www.samsung.com/us/Legal/SamsungLegal-EULA1](http://www.samsung.com/us/Legal/SamsungLegal-EULA1).

# Table of Contents

---

<b>Getting Started</b>	1	<b>Messages</b>	53
Front View	2	<b>Music Player</b>	55
Back View	3	<b>My Files</b>	56
Assemble Your Device	4	<b>PEN.UP</b>	58
Set Up Your Device	7	<b>S Health</b>	59
Set Up Accounts on Your Device	8	<b>S Note</b>	60
<b>Know Your Device</b>	9	<b>S Voice</b>	62
Home Screen	10	<b>Scrapbook</b>	63
Status Bar	13	<b>Smart Remote</b>	64
Edge Screen	14	<b>Video Player</b>	65
Navigation, Motions, and Gestures	16	<b>Voice Recorder</b>	66
Notification Panel	17	<b>Settings</b>	67
Multi Window	18	How to Use Settings	68
S Pen	20	Wi-Fi and Wi-Fi Direct	69
Entering Text	24	Download Booster	71
<b>Calling</b>	25	Bluetooth	72
Making and Answering Calls	26	Tethering and Mobile HotSpot	74
<b>Applications</b>	30	Airplane Mode	76
Apps Screen	31	Data Usage	77
Google Applications	33	Location Services	78
T-Mobile Applications	35	More Networks	79
Other Applications	36	Sharing Files with NFC	81
Calculator	37	Nearby Devices	82
Calendar	38	Printing	83
Camera and Video	39	Screen Mirroring	84
Clock	42	MirrorLink	85
Contacts	43	Sound Settings	86
Email	46	Display Settings	89
GALAXY Apps	48	Wallpaper	91
Gallery	49	Lock Screen	92
Internet	51	Multi Window Settings	93
		Notification Panel	94

 
Edge Screen Settings .....	95
One-Handed Operation.....	96
Easy Mode .....	97
Accessibility.....	98
Blocking Mode .....	100
Private Mode.....	101
Finger Scanner.....	102
Motions and Gestures.....	103
S Pen Settings .....	104
Accounts.....	105
Cloud .....	106
Backup and Reset.....	107
Language and Input Settings.....	108
Date and Time Settings .....	111
Safety Assistance .....	112
Accessories.....	113
Battery.....	114
Power Saving.....	115
Storage .....	116
Security.....	118
Help .....	120
About Your Device .....	121
Application Manager.....	122
Default Applications .....	124
Application Settings .....	125

# Getting Started

---

*Learn about your mobile device hardware, assembly procedures, and how to get started using your new device.*

# Front View

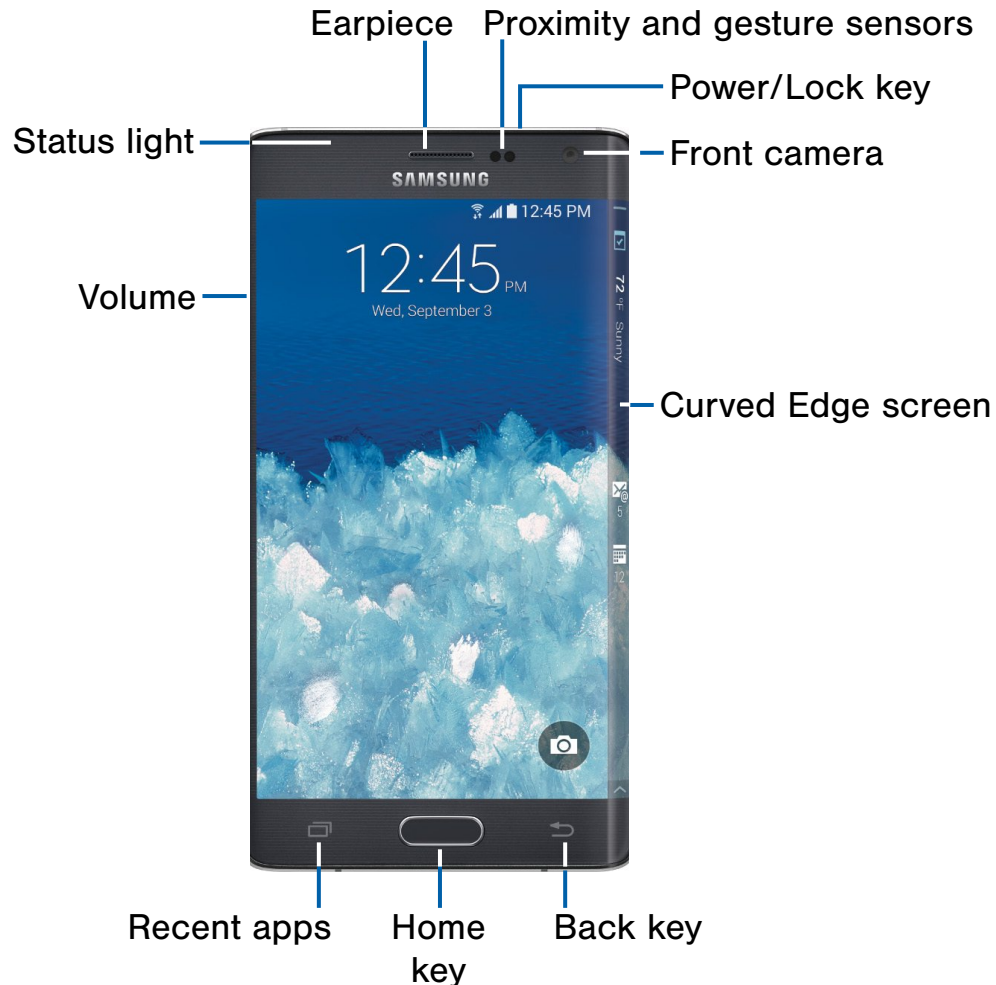


- **Back key:** Tap to return to the previous screen, or to close a dialog box, menu, or keyboard.
- **Curved Edge screen:** Provides quick access to frequently used apps, alerts, notifications, and device functionality all with the swipe of a thumb.
- **Earpiece:** Listen to a call.
- **Front camera:** Take self-portraits and record videos of yourself.
- **Home key:** Tap to return to the Home screen. Activate the Fingerprint security feature.
- **Proximity and gesture sensors:** Detects the presence of objects near the device.
- **Recent apps:** Tap to display recent apps or touch and hold for home screen options.
- **Power/Lock key:** Press and hold to turn the device on or off. Press to lock or wake up the screen. Press and hold to turn the device off or restart it, or for quick access to Airplane Mode, Emergency Mode, and to Mute, Vibrate, and Sound modes.
- **Status light:** Displays red when charging or the battery is low, blue when a notification has arrived or you are voice recording, and green when fully charged.
- **Volume:** Press to adjust the volume of your device's sounds and audio.



# Back View

 ---

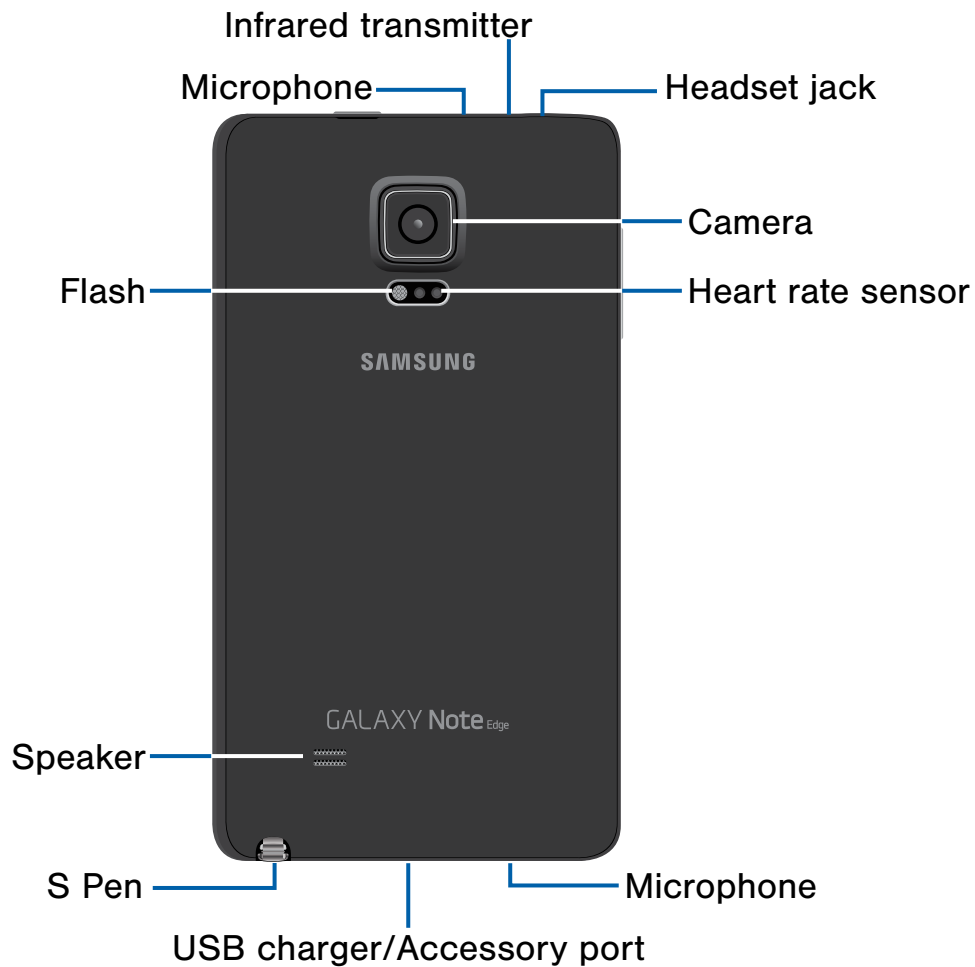

- **Camera:** Take pictures and record videos.
- **Flash:** Illuminate subjects in low-light environments when taking a photo or recording video.
- **Heart rate sensor:** When using the S Health app, this sensor measures your heart rate via your fingertip.
- **Headset jack:** Connect an optional headset (not included).
- **Infrared transmitter:** Controls external devices using infrared light.
- **Microphone:** Records audio and detects voice commands.
- **S Pen:** A stylus that assists you in performing various functions.
- **Speaker:** Plays music and other sounds.
- **USB charger/Accessory port:** Connect the Charger/USB cable (included), and other optional accessories (not included).

# Assemble Your Device

*Prior to use, it is necessary to install the SIM card, optional memory card (not included), and the battery.*

## Remove the Back Cover



1. Remove the back cover using the slot on the top of your phone.
2. Lift the cover up from the phone.

**Warning:** Do not bend or twist the back cover excessively. Doing so may damage the cover.

## Install the SIM Card

When you subscribe to a cellular network, you are provided with a plug-in SIM card. During activation, your SIM card will be loaded with your subscription details, such as your PIN, available optional services, and other features.

**Warning:** Please be careful when handling the SIM card to avoid damaging it. Keep all SIM cards out of reach of small children.



- Carefully slide the SIM card into the SIM card slot until the card locks into place.

Make sure that the card's gold contacts face into the device and that the upper-left angled corner of the card is positioned as shown.

**Caution:** If the card is not inserted correctly, the device will not detect the SIM card. Re-orient the card and place it back into the slot if the SIM is not detected.

 
## Install a Memory Card

You can install an optional microSD or microSDHC memory card (not included) to expand available memory space.

**Note:** A memory card can be installed at any time; it is not necessary to install it prior to using the device.

For more information on installing a memory card, see [Install a Memory Card](#).

## Install the Battery

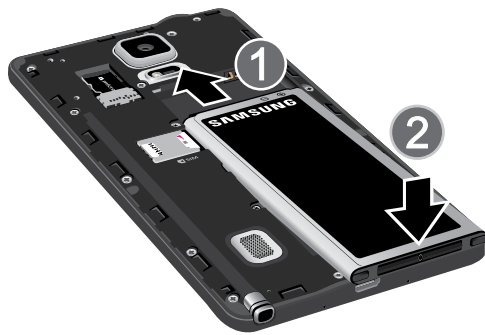

1. Insert the battery into the opening on the back of the phone, making sure the connectors align.
2. Gently press down to secure the battery.

## Replace the Back Cover



1. Place the battery cover onto the back of the phone and press down.
2. Press along the edge of the back cover until you have a secure seal.

## Charge the Battery

 
Your device is powered by a rechargeable, standard Li-Ion battery. A Wall/USB Charger (charging head and USB cable) is included with the device for charging the battery from any standard outlet.

The battery comes partially charged. You can use the device while charging.

**Note:** For fastest charging times, use the Adaptive Fast Charging charger that comes with your phone. This charger provides faster charging only when connected to devices that support Adaptive Fast Charging.




1. Insert the USB cable into the port.
2. Connect the USB cable to the charging head, and then plug the charging head into a standard outlet.

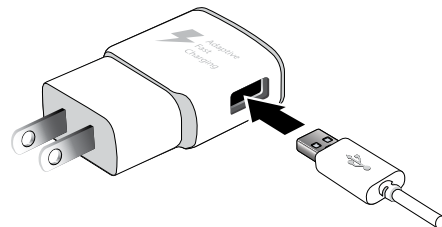

3. When charging is complete, unplug the charging head from the outlet and remove the USB cable from the device.


**Caution:** Failure to unplug the wall charger before you remove the battery, can cause damage to the device.

## *When to Charge the Battery*

When the battery is weak and only a few minutes of operation remain, the battery icon () blinks and the device sounds a warning tone at regular intervals.

In this condition, your device conserves its remaining battery power by dimming the screen.

When the battery level becomes too low, the device automatically turns off.

- For a quick check of your battery level, view the battery charge indicator located in the upper-right corner of your device's display. A solid color () indicates a full charge.

You can also choose to display a percentage value. Viewing a percentage value can provide a better idea of the remaining charge on the battery.

# Set Up Your Device


---

## Turn Your Device On and Off

### Turning the Device On

- ▶ Press and hold the **Power/Lock** key until the device vibrates and starts up.

### Turning the Device Off

1. Press and hold the **Power/Lock** key until the device vibrates and the Device options menu displays.
2. Tap  **Power off**.

## Welcome Screen

The first time you turn your device on, the Welcome Screen displays. It will guide you through the basics of setting up your device.

Follow the prompts to choose a default language, connect to a Wi-Fi network, set up accounts, choose location services, learn about your device's features, and more.

## Secure Your Device

Use your device's screen lock features to secure your device.

### *Lock the Device*

By default, the device locks automatically when the screen times out.

- ▶ To lock the device, press the **Power/Lock** key.

### *Unlock the Device*

The default Screen lock on your device is Swipe.

- ▶ To unlock your device, press the **Power/Lock** key or **Home** key, and then touch and drag your finger across the screen.

### *Set Up a Secure Screen Lock*

The default Screen lock is Swipe, which offers no security. To choose a more secure screen lock, see [Set a Screen Lock](#).

# Set Up Accounts on Your Device

---



## Google Account

Your new device uses your Google Account to fully utilize its Android features, including Gmail, Google Hangouts, and the Google Play Store.

When you turn on your device for the first time, set up your existing Google Account, or create a new Google Account.

– or –

To create a new Google Account or set up your Google Account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Google**.



## Samsung Account

Create a Samsung account, for access to Samsung content and apps on your device.

When you turn on your device for the first time, set up your existing Samsung account, or create a new Samsung account.

– or –

To create a new Samsung account or set up your Samsung account on your device at any time, use Accounts settings. For more information, see [Accounts](#).

- From a Home screen, tap  **Apps** >  **Settings** > **Accounts** > **Add account** > **Samsung account**.

 
# Know Your Device

---

*Learn some of the key features of your mobile device, including the screens and icons, as well as how to navigate the device and enter text using the keyboard.*

**Warning:** Please note that a touch screen responds best to a light touch from the pad of your finger or a non-metallic stylus. Using excessive force or a metallic object when pressing on the touch screen may damage the tempered glass surface and void the warranty.

# Home Screen

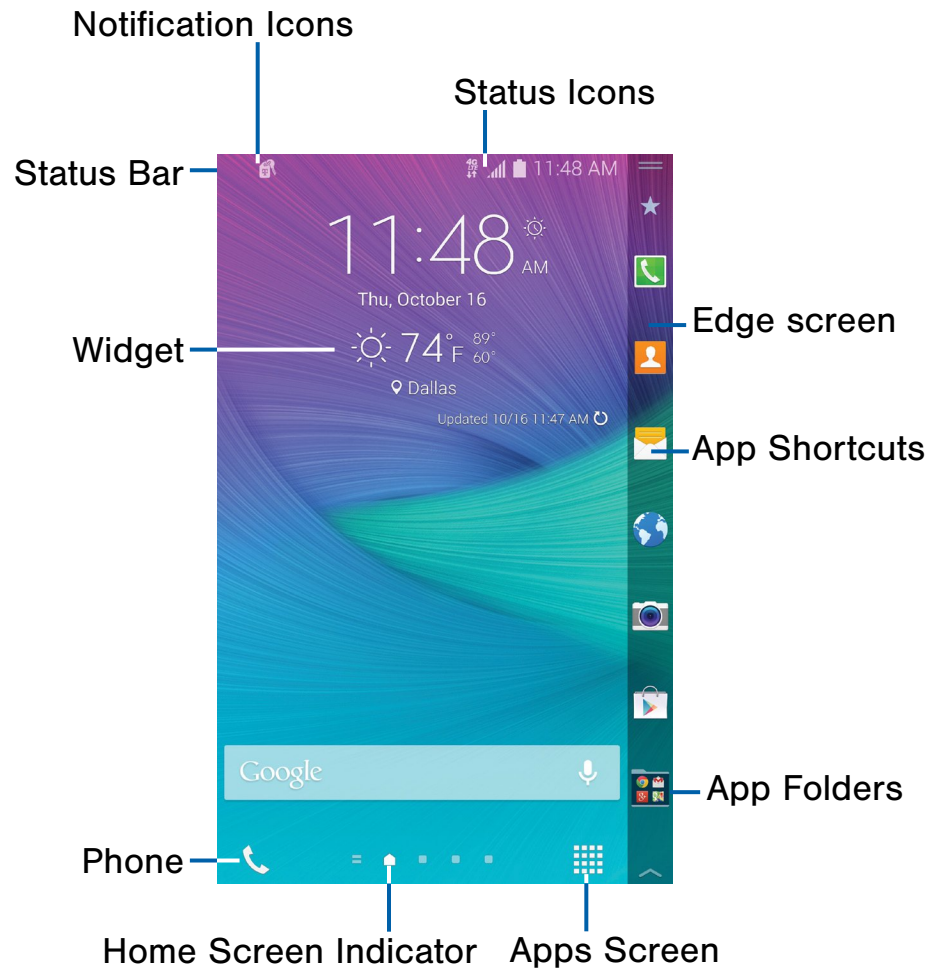

- **App Folders:** For your convenience, there are several Google applications grouped into a folder on the Edge screen.
- **Apps Screen:** Allows quick access to all of your applications.
- **App Shortcuts:** Shortcuts to your favorite applications.
- **Edge screen:** The display area along the edge of your phone. For more information, see [Edge Screen](#).
- **Home Screen Indicator:** Indicates which Home screen is presently displayed.
- **Notification Icons:** Display new messages and emails, notifications, available software updates, and so on.
- **Phone:** Shortcut to the phone keypad and related functions.
- **Status Bar:** Displays device status icons (right) and notification icons (left).
- **Status Icons:** Display information about the device, such as the network signal strength, battery level, the time, and so on.
- **Widgets:** Self-contained applications that run on the Home screen (not shortcuts).




*The Home screen is the starting point for using your device.*

*Customize your Home screen by adding application shortcuts, widgets, folders, and using wallpapers.*

## Manage Home Screens


Your device comes with multiple Home screens to hold apps and widgets. You can rearrange the Home screens in a different order.

1. From a Home screen, pinch the screen.  
– or –  
Touch and hold an empty space on the screen.
2. Use these options to manage screens:
  - **Add a screen:** Scroll to the end of the screens, and then tap **+** **Add**.
  - **Remove a screen:** Touch and hold on a screen, and then drag it to the **Remove** icon.
  - **Set a screen as the main Home screen:** Tap  **Main Home screen** at the top of a screen. This screen displays when you press the Home Key.
  - **Change the order of screens:** Touch and hold on a screen, and then drag to a new position.
  - Touch **Home screen settings** for options:
    - **Transition effect:** Change the visual effect used when you move between Home screens.
    - **Flipboard Briefing:** Display all Flipboard Briefing updates on the Home screen.

## App Shortcuts

You can use app shortcuts to launch an app from any Home screen.

### Add a Shortcut to a Home Screen

1. From a Home screen, tap  **Apps**.
2. Touch and hold an app shortcut, drag it to a Home screen, and then release it.

### Remove a Shortcut

1. Touch and hold an app shortcut to release it.
2. Drag the app shortcut to the **Remove** icon and release it.

**Note:** Removing a shortcut does not delete the app, it just removes the shortcut from the Home screen.

## Widgets

Widgets are self-contained apps that run on a Home screen. There are all kinds of widgets, including links to a specific contact, Internet bookmarks, Gmail and email accounts, and many others.

### Add a Widget to a Home Screen

1. Touch and hold an empty space on the screen, and then tap **Widgets**.
2. Touch and hold a widget, drag it to a Home screen, and then release it.

### Remove a Widget



1. From a Home screen, touch and hold a widget to release it.
2. Drag the widget to **Remove** and release it.

**Note:** Removing a widget does not delete the widget, it just removes the widget from the Home screen.


## Folders

Place folders on a Home screen to organize items.

### *Add a Folder to a Home Screen*

1. From a Home screen, touch and hold an app shortcut.
2. Drag the shortcut onto  **Create folder** and release.
3. Enter a folder name.
4. Tap  **Add** to place additional apps in the folder.
5. Tap **Done**. A folder is created with the shortcut(s) inside.

### *Using Folders*

1. Tap a folder to open it and access the shortcuts inside.
2. To add shortcuts to a folder, touch and hold the shortcut, and then drag it onto the folder and release.
3. To delete a folder, touch and hold the folder until it detaches, and then drag it to  **Remove** and release.

## Change the Wallpaper

Change the look of the Home and Lock screens with wallpaper. You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, pinch the screen.  
– or –  
Touch and hold an empty space on the screen.
2. Tap **Wallpapers**, and then choose **Home screen**, **Lock screen**, or **Home and lock screen**.
3. Tap a wallpaper to see a sample, and then tap **Set as wallpaper**.
  - Tap **From Gallery** or another location for additional images (if available).
  - Tap **Bubbles** or **Phase beam** for animated wallpaper. (Animated wallpaper consumes additional battery power.)
  - Tap **Live view wallpaper** or **My interests** to set up those options (Lock screen only).

# Status Bar

*The Status Bar at the top of the Home screen provides device information (such as network status, battery charge, and time) on the right side and notification alerts on the left.*

## Status Icons



Battery is fully charged.



Battery is low. The yellow area turns red as the charge level becomes critical.



Battery is charging.



Vibrate mode is enabled.



Mute mode is enabled.



The device is connected to a 4G LTE wireless network.



Signal strength.



Wi-Fi is active.



No wireless network is available.



NFC (Near-Field Communication) is enabled.

## Notification Icons



Missed call.



Call in progress.



Call is on hold.



Call is using speakerphone



New email has arrived



New Gmail has arrived.



New voicemail message has been received.



New text or multimedia message has arrived.



Download of a file or app is in progress.



File is being uploaded or sent.



Location service (GPS) is active.



App updates are available from the Google Play Store.



App updates are complete.



Keyboard is in use.



Connected to a computer using a USB cable.

# Edge Screen

---

*The Edge screen provides a variety of useful tools, shortcuts, and widgets. Panels for the Edge screen can be added, removed, and customized to your preferences. The following sections describe basic functionality.*

## Basic Gestures

The Edge screen responds to basic gestures as follows:

- Swipe right or left to switch between panels.
- Swipe down to view the Quick Tools.
- Swipe up to access settings (only when the screen is unlocked).






## Customize App Shortcuts

You can choose the apps you want to display in the Edge Screen.

- ▶ On the Edge Screen, tap the ★ **Favorite Apps** icon to edit the apps that appear on the tray:
  - To remove an app from the Edge Screen, tap and drag it off of the tray.
  - To add an app to the Edge Screen, tap and drag it to the tray.
  - To relocate an app, tap and drag it to a new location.



## Quick Tools

You can quickly use preset tools on your Edge Screen without disrupting your activity on the main screen.


1. Swipe down from the top of the Edge screen.
2. Select from the following tools:
  -  **Ruler:** Use your Edge screen as a ruler. Tap cm to change from centimeters to inches.
  -  **Stopwatch:** Count down with the Edge screen. Tap Start to begin the countdown. Tap Stop to end the time, or Lap to keep the record and immediately start a new record.
  -  **Timer:** Use your Edge screen as a timer. Tap the **plus** and **minus** signs to set the length of time. Tap **Start** to begin the timer.
  -  **Flashlight:** Use your camera flash as a flashlight. Tap on to use the flashlight. Tap off when you are done.
  -  **Voice recorder:** Use your Edge screen as a voice recorder. Use the Record, Cancel, Stop, and Pause options to edit your recording. Recordings are saved to the Audio file.
3. Swipe up from the bottom of the screen to close the quick tools.

## Edge Screen Settings

Configure the Edge screen panels to provide convenient functions that are the most useful to you.




- From a Home screen, tap  **Apps** >  **Settings** > **Edge screen**.

– or –



Swipe upward on the Edge screen and then tap  **Settings**.

See [Edge Screen Settings](#) for more information.



### Add Widgets to the Edge Screen

1. Swipe upward on the Edge screen and then tap  **Settings**.
2. Tap **Manage Panels**.
3. Check the box above the widgets you want to add to your Edge Screen. For more options tap  **Download** to add more options.
4. To remove a widget, tap  **More options** > **Uninstall**.




### Removing Widgets from the Edge Screen

1. Swipe upward on the Edge screen and then tap  **Settings**.
2. Tap **Manage Panels**.
3. Tap  **More options** > **Uninstall**.

### Arranging Widgets on the Edge Screen


1. Swipe upward on the Edge screen and then tap  **Settings**.
2. Tap **Manage Panels**.
3. Tap  **More options** > **Reorder**.
4. Touch and hold, then drag panels to change the order. When finished, tap **Reorder**.

### Adding Wallpaper to the Edge Screen

1. Swipe upward on the Edge screen and then tap  **Settings**.
  2. Tap **Express me** >  **Add**
    - Tap **Images** to choose an image from the Gallery.
    - Tap **Handwriting** to use the S Pen and draw an image or message.
    - Tap **Text** to type a message on your wallpaper.
    - Tap **Effect** to add an effect to the wallpaper.
- or –
- Tap  **More options** > **Import** to import images.

### Using Night Clock

Night clock turns your device into a clock when the screen is turned off. To use this feature, set a daily start and end time (up to 12 hours), and turn Night clock on.

1. Swipe upward on the Edge screen and then tap  **Settings**.
2. Tap **Night clock**.
3. Tap **ON/OFF** to activate Night mode.
4. Tap and hold, then drag **Start** to set the daily start time.
5. Tap and hold, then drag **End** to set the daily end time.

# Navigation, Motions, and Gestures

---

## Touchscreen Navigation

### *Tap*

Lightly tap items to select or launch them.

- Tap the on screen keyboard to enter characters or text.
- Tap an item to select it.
- Tap an app icon to launch the application.

### *Touch and Hold*

Activate onscreen items by a touch and hold gesture. For example:

- Touch and hold a widget on the Home screen to move it.
- Touch and hold a field to display a pop-up menu of options.

### *Swipe or Slide*

To swipe, lightly drag your finger vertically or horizontally across the screen.

- Swipe the screen to unlock the device.
- Swipe the screen to scroll through the Home screens or menu options.

### *Drag*

To drag, touch and hold on an item, and then move it to a new location.

- Drag an app shortcut to add it to a Home screen.
- Drag a widget to a place it in a new location on a Home screen.

### *Pinch and Spread*

Pinch the screen using your thumb and forefinger or spread by moving your fingers apart.

 
- Pinch the screen to zoom in while viewing a picture or a web page.
- Spread the screen to zoom out while taking a picture.

## Motions and Gestures

Control your device by making specific gestures with your hand above the device's screen.

For details, see [Motions and Gestures](#).

# Notification Panel

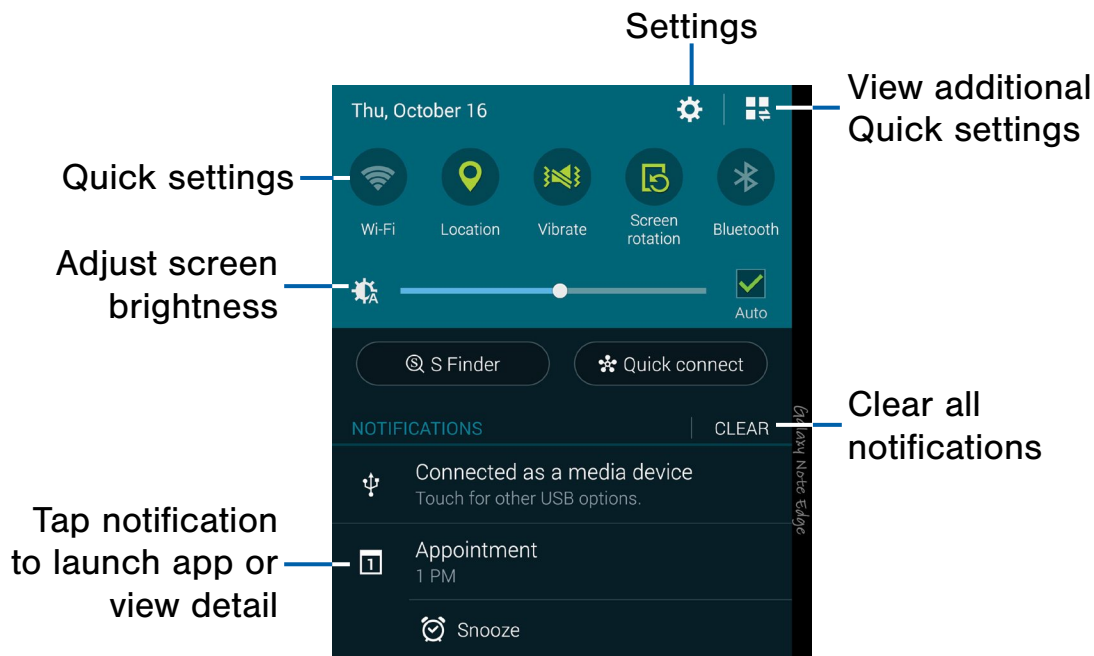

*Notification icons display on the Status Bar displaying calendar events, device status, and more. For details about these notifications, open the Notification Panel.*

## Quick Settings

In addition to notifications, the Notification Panel also provides quick access to device functions such as Wi-Fi, allowing you to quickly turn them on or off.


### To view additional Quick settings:

- Swipe left or right across the visible icons.

– or –

Tap  **View all.**

 
## View the Notification Panel

1. Swipe down on the Status Bar to display the Notification Panel.
2. Scroll down the list to see notification details.
  - Tap an item to open it.
  - To clear a single notification, drag the notification left or right. Tap **Clear** to clear all notifications.
3. To close the Notification Panel, swipe upward from the bottom of the screen or tap the  **Back** key.

## Notification Panel Settings

To customize the Notification Panel, see [Notification Panel](#).

# Multi Window

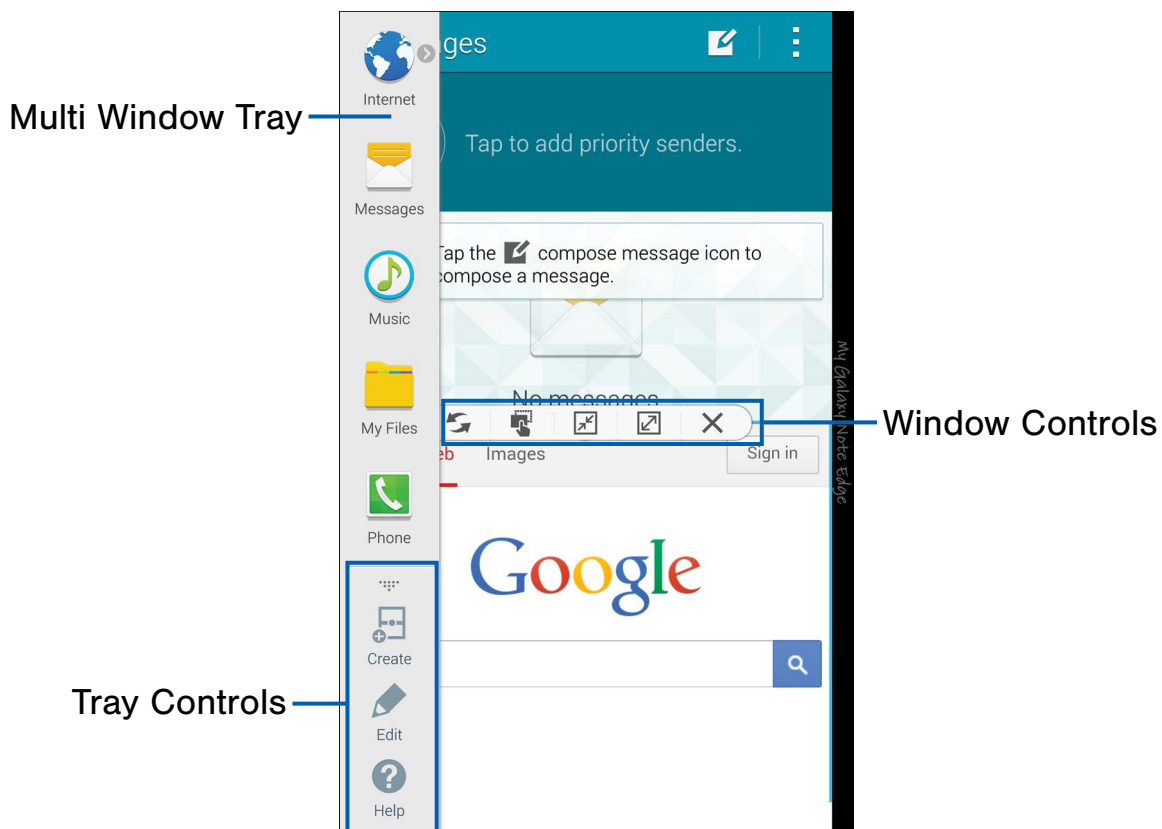

*Multitask by using multiple applications at the same time.*

**Tip:** You can also activate Multi window from the Notification Panel.

## Activate Multi Window

1. From a Home screen, tap **Apps** > **Settings** > **Multi window**.
2. Tap **ON/OFF** to activate.
  - Tap **Open in multi window view** to automatically view content in Multi window when you open files from My Files or Video player, or attachments from email.
  - Tap **Pop-up view shortcut** to be able to swipe down diagonally from the corner of a window to put it in pop-up view.

## Using Multi Window

After enabling Multi Window, you can use it to run multiple apps at the same time.


**Note:** Multi Window does not support all apps.

The apps display together on a split screen. You can switch between the apps, adjust the size of their display on the screen, and copy information from one app to the other.

- Tap the Multi window tab to display the tray, and then drag apps to the windows.



## Window Controls

Select an application window and tap the  **Border button** in the middle of the window border.

### Control Buttons



**Switch windows:** Switch the positions of two Multi Window applications.



**Move content:** Share items between the application windows. Drag an item to share from one window to another. Some applications may not support this feature.



**Collapse window:** Collapse the selected window.





**Expand:** Open the selected window in full screen view.



**Close application:** Close the selected window.

## Choose Apps to Display in the Multi Window Tray

You can choose the apps you want to display in the Multi window tray.

1. Tap the Multi window tab to display the tray.
2. Tap  **Tray Controls** >  **Edit** for options:
  - To remove an app from the tray, tap and drag it off of the tray and place it in the storage area.
  - To add an app to the tray, tap and drag it from the storage area to the tray.
  - To relocate an app, tap and drag it to a new location.

## Multi Window Settings

To customize Multi Window, see [Multi Window Settings](#).



## Customize Multi Window

You can customize Multi window to suit your preferences.

### Create a Window Group

If you use certain apps together in Multi window often, you can create a window group to quickly display the two apps in Multi window.

The window group will be stored in the Multi window tray, so you can choose it any time to display the two apps.

1. Tap the Multi window tab to display the tray, and then drag apps to the windows.
2. Scroll to the bottom of the Multi window tray, and then tap  **Tray Controls** >  **Create**.

### Change the Order of Apps in the Multi Window Tray

1. Tap the Multi window tab to display the tray.
2. Tap and hold an app, drag it to a new position in the tray and then drop it.

# S Pen

*The S Pen is a stylus that assists you in performing different functions. Switch between touch and pen input by using the S Pen button.*



## Remove S Pen

The S Pen stores inside your device for convenient access.

- Slide the S Pen from your device using the notch on the end of the S Pen.



## Air Command

Air command allows you to quickly activate frequently used applications or perform actions.



To launch the Air command menu:

- Remove the S Pen from the S Pen slot, hold the S Pen near the screen so that the pointer appears, and press the **S Pen** button once.



**Action Memo:** Launch a memo and link it to actions. Action Memos are saved in the S Note app.



**Smart select:** Draw around an area with the S Pen to collect a variety of content.




**Image clip:** Outline and crop images on the screen, in any shape, to share or paste.



**Screen Write:** Capture screenshots and write or draw on them.

## Action Memo

An Action Memo is a Quick Note that is linked to actions. To open a Quick Note:

- ▶ Launch the **Air command** menu and select  **Action Memo**.

– or –

Press and hold the S Pen button and double-tap the screen with the pen.






**Note:** Action Memos are saved in the  **S Note** app.

See [Action Memos](#) for more information.


## Smart Select




The Smart select feature provides a capture tool to select content on a screen. You can then add it to your Scrapbook app or share it with your contacts.

### To launch the Smart select tool:

1. Launch the Air command menu and select  **Smart select**.
2. Use the selection box to select your content. The selected item can be saved to the Scrapbook or shared. The following options are available:
  - Tap  **Collect** to store the content. It will appear in minimized form on the screen until you save or delete the capture.
  - Tap  **Scrapbook** to save the content in your Scrapbook. See [Scrapbook](#) for more information.
  - Tap  **Share Via** to share the captured content with your contacts.
  - Tap  **More options** > **Help** to learn more about using Smart select.

### To use stored content:




When you tap  **Collect**, the captured content is stored on top of the Home screen as a thumbnail. The following options are available:

- Tap  **Collect more** to take another Smart select capture.
- If more than one capture has been taken, tap the  **Expand** arrow to view all of the capture thumbnails.
- Tap a thumbnail to view the content and see the options available. You can save the content to your Scrapbook, share it with others, or delete it.
- To delete captured content, tap the thumbnail to view it. Touch and hold the capture to be deleted, select all item(s) to delete, and then tap the  **Delete** icon.

## Image Clip










Outline and crop images from the screen, in any shape, to share or paste. You can edit the cropped content, or personalize it with your own handwriting.

### To use Image clip:

1. Launch the **Air command** menu and select  **Image clip**.
2. Use the S Pen to draw around the content you wish to capture.
3. The selected clip is centered on the screen. To refine your selection, use the Transform buttons. You can choose your hand drawn shape, regular shapes, or a magnetic auto shape.
4. Once you decide on a shape, select one of the following options:
  - Tap the  **Scrapbook** icon to save the content in the Scrapbook. See [Scrapbook](#) for more information.
  - Tap the  **Share via** icon to share the captured content with your contacts.

## Screen Write

Screen Write allows you to capture a screen shot and then write notes on the screen shot. To use Screen Write:

1. Launch the **Air command** menu and select  **Screen write**.
2. The current screen is captured and a pen tool appears. The following editing tools are provided:
  -  **Draw**: Write on the screen shot. Press the Pen icon a second time to change the pen tip, size, color, and to save presets.
  -  **Erase**: Erase the writing or drawings on the screen shot. Tap the **Eraser** icon a second time to change the size of the eraser area and to see the **Clear all** option.
  -  **Crop**: Crop the screenshot. Tap the **Crop** icon a second time to change the shape to either Lasso or Rectangle.
  -  **Undo**: Undo the last action.
  -  **Redo**: Redo the last action that was undone.
3. When you are finished writing, either tap  **Save** to save the screen shot or tap  **Cancel** to delete the shot. You can also tap  **Share via** icon to share the image using another app. The screen shot is saved in the Gallery app.

## Air View

Hover the S Pen over the screen to preview content or view information about an item on the screen.

For example:



- Hover over an email in a list to preview the message before opening it.
- Hover over a photo album to preview the contents or see a picture enlarged.
- Hover over the time line during video playback to preview and navigate to specific scenes.
- Hover over an icon or screen button to view the item's name or description.

**Note:** The preview function is only available when the S Pen's onscreen pointer is a solid color.

## Direct Pen Input

When filling out a form field in an app (like **Name** or **Number** in Contacts), you can open a Handwriting window to allow you to write the entry with the S Pen rather than type.





To use the Handwriting window:

1. When filling out a form field, hover the S Pen over the field until the  Handwriting icon appears.
2. Tap the **Handwriting** icon. The Handwriting window appears.
3. Use the space provided in the window to write the entry by hand using the S Pen. While writing, your entries will be converted into text.
4. To edit the converted text, use the Space and Delete icons provided. To change the position of the cursor, drag the pointer below the cursor to the desired position for editing.
5. When finished, tap  **Done**.

## Add Annotations to Your Photos

Use S Pen to annotate your photos.

**Note:** Adding annotations to a photo creates a copy of the photo. The original photo is not modified.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. While viewing a photo, tap  **More options** > **Screen write**.
3. Use the S Pen to annotate the photo. Tap  **Save** to save the annotated photo.

 
## Configure S Pen Settings

For information on configuring S Pen settings, including options for sounds and for tracking S Pen when it's not stored in your device, see [S Pen Settings](#).

## Replace the S Pen Tip

You can replace the tip of the S Pen. To replace the tip:

1. Use tweezers to pull out the S Pen tip (1).
2. Insert the new pen tip on the top of the S Pen and press until it clicks in place (2).

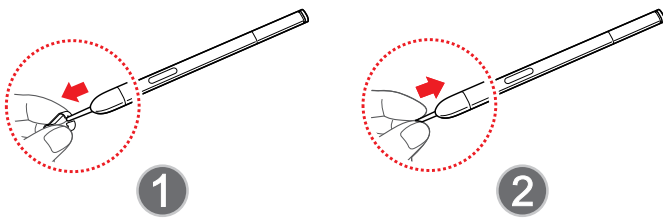

# Entering Text

## Using the Samsung Keyboard

Type your text input using a QWERTY keyboard.

 


## Configure the Samsung Keyboard

 
To customize the Samsung Keyboard, see [Samsung Keyboard Settings](#).


## Using Google Voice Typing

Instead of typing, speak your text input.

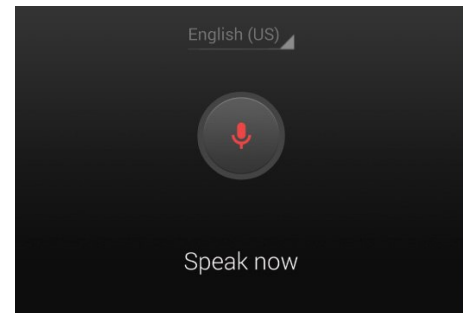



### Special Keys


 Tap to insert numbers and symbols.


 Tap to switch to letters.


Touch and hold the **Options** key to:


 Use Google Voice Typing.

 Use your handwriting to enter text.



 Access the clipboard.


 Access keyboard settings.

 Insert emoticons.

 Change the layout of the keyboard.

1. To enable Google Voice Typing:

- From a Home screen, tap  **Apps** >  **Settings** > **Language and input**.
- Tap the check box next to **Google voice typing** to enable this feature.

2. On the Samsung Keyboard, tap  **Google Voice Typing**. You may need to touch and hold the **Options** key (left of the **Space** key) to find it.

3. Speak your text.

## Configure Google Voice Typing

To customize Google Voice Typing, see [Google Voice Typing Settings](#).

## Predictive Text

Predictive text suggests words matching your text entries, and, optionally, completes common words automatically. Predictive text can learn your personal writing style from your contacts, messages, email, and social networking sites—improving its accuracy of predicting your text entries.

# Calling

---

*Make telephone calls using a variety of calling features and services.*

# Making and Answering Calls

*Learn how to make or answer a call. Explore features and functionality associated with making or answering a call.*

## Making a Call



1. From the Edge screen, tap  **Phone**.

– or –

From a Home screen, tap  **Phone**.

2. Enter a number and tap  **Dial**.

*Quickly Dial a Number from Your Contact List*

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. While viewing your contact list, swipe your finger across a contact to the right call the contact.


*Dial a Recent Number*

All incoming, outgoing, and missed calls are recorded in the Call log. If the number or caller is listed in your contacts list, the associated name is also displayed.

1. From the Edge screen, tap  **Phone**.

– or –



From a Home screen, tap  **Phone**.

2. Tap the **Logs** tab. A list of recent calls is displayed.
3. Tap a contact, and then tap  **Call**.

## Answering a Call



When a call is received the phone rings and displays the caller's phone number, or name if stored in the contacts list. If your phone is active it will appear on the Edge screen. If your phone is inactive it will appear on the main screen.

1. On the Call screen:

- Touch and drag  **Answer** in any direction to answer the call.
- Touch and drag  **Reject** in any direction to reject the call and send it to your voicemail.

## Ending a Call

When you are ready to end your call:

- From the main screen tap  **End call**.
- From the Edge screen tap  **End**.



## Multitasking While on a Call

The call screen can be placed on the Edge screen or in the hidden in your Status Bar to allow you to access other applications while on a phone call.

**To move the call screen from the Edge screen to your main screen:**

- ▶ Tap  **Expand**.

**To return the call screen to the Edge screen:**

- ▶ Tap  **Collapse**.

**To exit the call screen:**

- ▶ Tap the **Home** key.

Your active call is indicated by an icon on the Status Bar.

**To return to the call screen:**

- ▶ Tap the reactivate button to return to the call screen.

**To end a call from any application:**

- ▶ Swipe the Status Bar downward to reveal the Notification Panel, and then tap **End**.


## Options During a Call

Your phone provides a number of functions that you can use during a call.

### Adjusting the Call Volume

- ▶ Press the **Volume Key** to increase or decrease the volume.

– or –

Quickly add more volume to the incoming audio by tapping  **More options** > **Extra volume**.

## Listen with the Speaker or Bluetooth Headset

Listen to the call using the speaker or through a Bluetooth headset (not included).


- ▶ Tap **Speaker** to hear the caller using the speaker.

– or –

Tap **Bluetooth** to use a Bluetooth headset (not included).


## Personalize the Call Sound Setting

Adjust the sound by using an audio equalizer.

- ▶ From the currently active call, tap  **More options** > **Personalize call sound**.

## Place a New Call While in a Call


If your service plan supports this feature, you can make another call while a call is in progress.

1. From the active call, tap **Add call** to dial the second call. The first call is displayed as a thumbnail.
2. Dial the new number and tap  **Dial**.
  - Tap **Swap** to switch between the two calls.
  - Tap **Merge** to hear both callers at once (multi conferencing).

## Call Waiting



If your service plan supports this feature, you can answer an incoming call while you have a call in progress. You are notified of an incoming call by a call waiting tone.

### To answer a new call while you have a call in progress:


1. Slide  **Answer** in any direction to answer the new call.
2. Tap an option:
  - **Putting xxx on hold** to place the previous caller on hold while you answer the new incoming call.
  - **Ending call with xxx** to end the previous call and answer the new call.
3. Tap the previous **On hold number entry** and select **Swap** to switch between the two calls. This places the new caller on hold and activates the previous call.

## Call Log

The numbers of the calls you have dialed, received, or missed are stored in the Call log.

1. From the Edge screen, tap  **Phone**.  
– or –  
From a Home screen, tap  **Phone**.
2. Tap the **Logs** tab. A list of recent calls is displayed. If the caller is in your contacts list, the caller's name is displayed.



### Save a Recent Call to Your Contacts List

1. From the Edge screen, tap  **Phone**.
2. Tap **Logs** tab.
3. Tap the call that contains the information that you want to save to your contacts list.
4. Tap **Create contact**.

– or –



If you want to replace the number for an existing contact, tap **Update existing**.

## Delete a Call from the Call Log

1. From the Edge screen, tap  **Phone**.
2. Tap **Logs** tab.
3. Touch and hold the call you want to delete from the Call log.
4. Tap  **Delete**.

### Add a Call to the Reject List


By adding a caller to your Reject list, future calls from this number will be sent directly to your voicemail.

1. From the Edge screen, tap  **Phone**.
2. Tap **Logs** tab.
3. Touch and hold the caller you want to add to the Reject list.
4. Tap  **More options** > **Add to Auto reject list**.




## Make a Call Using Speed Dial

You can assign a shortcut number to a contact for speed dialing their default number.

### To make a call using Speed Dial:

1. From the Edge screen, tap  **Phone**.
2. Tap the **Keypad** tab.
3. Touch and hold the speed dial number.  
  
If the speed dial number is more than 1 digit long, enter the first digits, then hold the last digit.

## Create a Speed Dial

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **More options** > **Speed dial**. The Speed dial screen displays showing the numbers 1 through 100. Number 1 is reserved for voicemail.
3. Tap an unused number. A list of contacts displays.
4. Tap a contact to assign to the number. The selected contact displays in the speed dial number box.

### To remove a Speed Dial number assignment:

- Tap  **Delete**.



## Make an Emergency Call

The Emergency calling mode makes redialing an emergency number a one-tap process.




**Note:** This mode can drain your battery power more rapidly than normal calling mode.

### *Make an Emergency Call without a SIM Card*

Without a SIM card, you can only make an emergency call with the phone; normal cell phone service is not available.



1. From the Lock screen, tap **Emergency call**.
2. Enter **911** and tap  **Dial**.
3. Complete your call. During this type of call, you will have access to the Speaker mode, Keypad, and End Call features.
4. Tap  **End call**.

### *Make an Emergency Call with a SIM Card*

1. From the Edge screen, tap  **Phone**.  
– or –  
From a Home screen, tap  **Phone**.
2. Enter the emergency number (example: 911), then tap  **Dial**.

## Call Settings

To access the Call settings menu:

1. From the Edge screen, tap  **Phone**
2. Tap  **More options** > **Settings** > **Call**.  
– or –

From a Home screen, tap  **Apps** >  **Settings** > **Call**.

# Applications

---

*The Apps screen displays all applications installed on your device, both preloaded apps and apps you download and install yourself.*

*Learn how to change the way apps appear, organize apps into folders, and uninstall or disable apps.*


# Apps Screen

---

*The Apps screen shows all preloaded apps and apps that you downloaded. You can uninstall, disable, or hide apps from view.*



Shortcuts to apps can be placed on any of the Home screens. For more information, see [Add a Shortcut to a Home Screen](#).

## Accessing Applications

1. From a Home screen, tap  **Apps**.
2. Tap an application's icon to launch it.
3. To return to the main Home screen, press the **Home** key.





## Download and Install New Apps

Find new apps to download and install on your device:

-  **Play Store:** Download new apps from the Google Play Store. Visit [play.google.com/store/apps](https://play.google.com/store/apps) to learn more.
-  **GALAXY Apps:** View and download Samsung apps that are optimized for use with GALAXY devices. Visit [apps.samsung.com](https://apps.samsung.com) to learn more.

## Uninstall or Disable Apps



You can uninstall or disable apps you download and install.

- Preloaded apps cannot be uninstalled.
  - Apps that are disabled are turned off and hidden from view.
1. From a Home screen, tap  **Apps**.
  2. Tap  **More options** > **Uninstall/disable apps**. Apps that can be uninstalled show  **Remove** on their icon.
  3. Tap  **Remove** and follow the prompts to either uninstall or disable the app.






## Organize Your Apps

The Apps icons can be organized in folders and listed alphabetically or in your own custom order.

### *Change the Order Apps Are Listed*



1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Sort by**.
3. Tap an option:
  - **Custom:** Allows you to touch and hold on apps to move them from screen to screen.
  - **Alphabetical order:** Apps are arranged in a grid, in A-Z order.

## Use Folders to Organize Apps

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Create folder**.
3. Enter a folder name.
4. Tap  **Add**, select apps to include in the folder, and then tap **Done**.
5. Touch a folder to view its apps, then touch an app to launch it.
6. To delete a folder, from a Home screen, tap  **Apps** >  **More options** > **Remove folder**. Select the folder and tap **Done**.



## Hide Apps from View

You can hide (rather than uninstall or disable) any apps you do not want to see on the Apps screen.




1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Hide apps**.
3. Tap apps to hide, and then tap **Done**.

## Show Hidden Apps

You can unhide apps you have hidden and put them back on the Apps screen.

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** > **Show hidden apps**.
3. Tap apps to unhide, and then tap **Done**.

## Apps Screen Options

1. From a Home screen, tap  **Apps**.
2. Tap  **More options** for these options:
  - **Edit**: Touch and hold an app icon then drag it to:
    - **Create folder** to create a new folder.
    - **App info** to view information about this app.
    - **Disable** or **Delete** to remove the app. (Preloaded apps cannot be uninstalled.)
  - **Create folder**: Create a new folder to hold the app icon.
  - **Remove folder**: Delete a folder.
  - **Sort by**: Configure the Apps screen.
  - **Downloaded apps**: Display only downloaded apps.
  - **Uninstall/disable apps**: Uninstall an app that you downloaded to your device, or disable a preloaded app (preloaded apps cannot be uninstalled). Touch  **Remove** to remove or disable the selected app.
  - **Hide apps**: Hide apps from the Apps screen.
  - **Show disabled apps**: Display disabled apps.
  - **Show hidden apps**: Display hidden apps.
  - **Help**: View information about your device.

# Google Applications

---

*Enjoy these applications from Google.*

**Note:** Certain applications require a Google account. Visit [google.com](http://google.com) to learn more.



## Chrome

Use Google Chrome to browse the Internet and bring your open tabs, bookmarks and address bar data from your computer to your mobile device.

Visit [google.com/chrome/browser](http://google.com/chrome/browser) to learn more.



## Drive

Open, view, rename, and share your Google Docs and files.

Visit [drive.google.com](http://drive.google.com) to learn more.



## Gmail

Send and receive email with Gmail, Google's web-based email service.

Visit [gmail.com](http://gmail.com) to learn more.



## Google


Search not only the Internet, but also the apps and contents of your device.

## Google Now

Google Now works in the background to collect information you regularly look up and organize it into convenient cards that appear when you need them.

Visit [google.com/landing/now](http://google.com/landing/now) to learn more.

► Press and hold the **Home** key.

**Note:** When Google Now is enabled, you can also access it by touching .



## Google Settings

Quickly and easily change Google app settings to suit your preferences.

**Note:** You must be signed in to the application you want to configure. For example, sign in to Google+ to configure Google+ settings.



## Google+

Stay connected and share with Google+. Chat with friends and family, post photos, and see what others are sharing.

Visit [google.com/mobile/+](http://google.com/mobile/+) to learn more.



## Hangouts

Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

Visit [google.com/hangouts](http://google.com/hangouts) to learn more.



## Maps

Use Google Maps to find your current location, get directions, and other location-based information.

Visit [google.com/maps](https://google.com/maps) to learn more.

**Note:** You must enable location services to use Maps. Please see [Location Services](#).



## Play Books

With Google Play Books, you can find millions of free e-books and hundreds of thousands more to buy in the eBookstore.

Visit [play.google.com/store/books](https://play.google.com/store/books) to learn more.



## Play Games

Discover hundreds of games for download and purchase through the Google Play Store.

Visit [play.google.com/store](https://play.google.com/store) to learn more.



## Play Movies & TV

Watch movies and TV shows purchased from Google Play. You can stream them instantly, or download them for viewing when you are not connected to the Internet. You can also view videos saved on your device.

Visit [play.google.com/about/movies](https://play.google.com/about/movies) to learn more.



## Play Music

With Google Play Music, you can play music and audio files on your device.

Visit [play.google.com/about/music](https://play.google.com/about/music) to learn more.



## Play Newsstand

Subscribe to your favorite magazines to read on your device at your leisure.

Visit [play.google.com/store/newsstand](https://play.google.com/store/newsstand) to learn more.



## Play Store

Find new apps, movies and TV shows, music, books, magazines, and games in Google Play Store.

Visit [play.google.com/store](https://play.google.com/store) to learn more.



## Voice Search

Use voice commands to search the web with Google.



## YouTube

View and upload YouTube videos right from your device.

Visit [youtube.com](https://youtube.com) to learn more.



# T-Mobile Applications

---

*Enjoy these applications from T-Mobile.*

**Note:** Certain applications require a data plan or paid subscription. Visit [t-mobile.com](http://t-mobile.com) to learn more, or contact your service provider for additional information.



## Mobile HotSpot

This is a shortcut to the **Tethering and Mobile HotSpot** settings page.

**Note:** A separate plan is required to use this feature. Charges may apply. Please contact your service provider for further details.



## T-Mobile My Account

This application provides you online access to account information such as your current activity, billing information, service plans, downloads, and more.



## T-Mobile Name ID

This application lets you modify onscreen Caller ID information. Name ID identifies unknown callers by Name, City, and State.



## T-Mobile TV

This application brings you live TV and Video on Demand.

**Note:** A data plan is required to use this feature. Charges may apply. Please contact your service provider for further details.



## Visual Voicemail

This application helps you navigate and manage your voicemail messages by sight rather than having to listen to all messages in order.



## Amazon

Shop at Amazon.com from your device.

Visit [Amazon.com](http://Amazon.com) to learn more.



## Lookout

Lookout Mobile Security provides key security options, such as anti-virus and anti-malware technology, a lost and stolen device locator service, an application privacy adviser, and a backup service.

# Other Applications

---



## Dropbox

Use this application to save and share files with others via the Dropbox cloud storage. When you save files to Dropbox, your device automatically syncs with the web server and any other computers that have Dropbox installed.

Visit [dropbox.com](https://dropbox.com) to learn more.



## Facebook

Keep up with friends and family with the Facebook app. Share updates, photos, and videos, as well as text, chat, and play games.



## Flipboard

Use this application to access your personalized magazines.

Visit [flipboard.com](https://flipboard.com) to learn more.



## Hancom Office 2014

Opens and manages Hancom Office Hanword (\*.hwp) and Hanshow (\*.show) documents.



## Milk




Exclusive to Galaxy owners, MilkMusic is a radio service that gives you more of the music you love, curated by top DJs and industry pros and all for free.

# Calculator

---

*The Calculator provides basic and advanced arithmetic functions.*

## Basic Operation

1. From a Home screen, tap  **Apps** >  **Calculator**.
2. Enter the first number using the numeric keys.
3. Tap the appropriate arithmetic function key.
4. Enter the next number.
5. To view the result, tap the  **Equals** key.

## Additional Functions

**To clear the results:**

- Tap  **Clear**.

**To clear the calculator history:**

- Tap  > **Clear history**.

**To copy all or part of the calculation to the clipboard:**

- Touch and hold an entry in the display field.

## Scientific Calculator




Turn the device landscape to use advanced arithmetic functions, such as *sin*, *cos*, and *tan*.

# Calendar

---




*Manage your events and tasks.*

## Create an Event or Task


1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **Add** and use one of the following methods:
  - **Add event:** Enter an event with an optional repeat setting.
  - **Add task:** Enter a task with an optional priority setting.
3. Enter details for the event or task, and then tap **Save**.

## Deleting Events or Tasks




**To delete an event or task:**

1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task.
3. Tap  **Delete**.

**To delete multiple events or tasks:**




1. Tap  **More options** > **Delete**.
2. Tap events or tasks to select them.
3. Tap **Done**.
4. At the prompt, tap **Delete**.

## Sharing Events

 
1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap to view an event or task.
3. Tap  **Share via**, select a sharing method, and follow the prompts.

## Calendar Settings

These settings allow you to modify settings associated with using the Calendar.




1. From a Home screen, tap  **Apps** >  **Calendar**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the prompts.
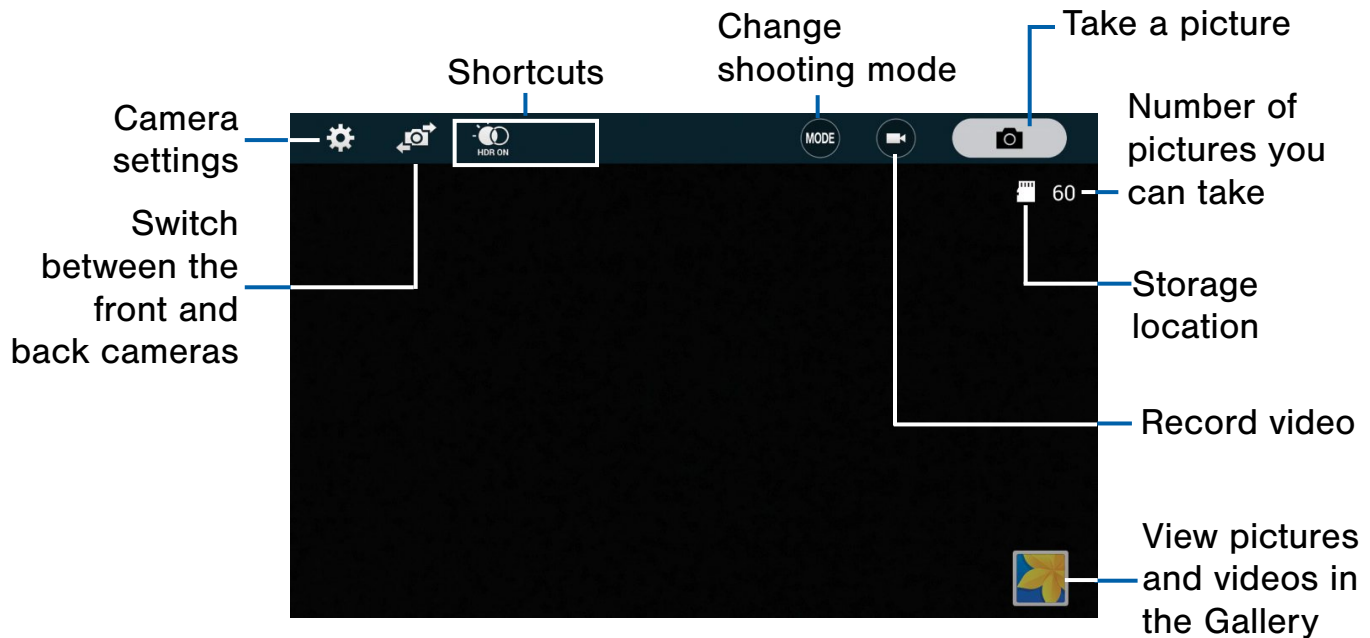
# Camera and Video



## Taking Pictures




Take pictures with your device's front or back camera, or combine shots with Dual mode.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Using the display screen as a viewfinder, compose your shot by aiming the camera at the subject. While composing your picture, use the onscreen options or these gestures:
  - Touch the screen with two fingers and pinch or spread them on the screen to zoom in and out.
  - Tap the screen to focus on the area you touched.
3. Tap  to take the picture.




**Note:** You can press the **Volume** key up or down to take a picture. You can also set the Volume key to act as the video record key or as a zoom key.

## Shooting Mode


Several visual effects are available. Some modes are not available when taking self-portraits.

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **MODE**, and then scroll up or down the screen at the right side of the screen.
  - **Auto**: Allow the camera to evaluate the surroundings and determine the ideal mode for the picture.
  - **Beauty face**: Take a photo with lightened faces for gentler images.
  - **Shot & more**: Take a quick burst of photos and apply effects to them.
  - **Rear-cam selfie**: Set the rear camera to automatically detect and focus on your face when you take self-portrait pictures using the rear camera.
  - **Selective focus**: Make objects stand out from the background. They must be within 1.5 feet from you, and at least 3 times this distance from the background.
  - **Panorama**: Create a linear image by taking pictures in either a horizontal or vertical direction.
  - **Virtual tour**: Create interactive virtual tours of your surroundings.
  - **Dual camera**: Take photos and record videos using the front and rear cameras at the same time. A variety of picture-in-picture styles are available.
  - **Manage modes**: Select which shooting modes to display when you tap **MODE**.
  - **Download**: Download additional shooting modes from the GALAXY Apps store.

## Camera Settings

1. From a Home screen, tap  **Apps** >  **Camera**.
2. Tap  **Settings**. Available options vary depending on the camera/recording mode used.

- **Picture size**: Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
- **Effects**: Add special graphical effects.
- **Timer**: Take time-delayed pictures or videos.
- **Flash**: Activate or deactivate the flash.



Tap  **Menu** to display the following additional options.

- **Exposure value**: Change the exposure value. This determines how much light the camera's sensor receives. For low light situations, use a higher exposure.
- **ISO**: Select an ISO value. This controls camera light sensitivity. It is measured in film-camera equivalents. Low values are for stationary or brightly-lit objects. Higher values are for fast-moving or poorly-lit objects.
- **White balance**: Select an appropriate white balance, so images have a true-to-life color range. The settings are designed for specific lighting situations. These settings are similar to the heat range for white-balance exposure in professional cameras.
- **Metering modes**: Select a metering method. This determines how light values are calculated. Center-weighted measures background light in the center of the scene. Spot measures the light value at a specific location. Matrix averages the entire scene.
- **HDR (rich tone)**: Save the picture in HDR (rich tone) only.
- **Tap to take pics**: Tap the image on the preview screen to take pictures.
- **Video size**: Select a resolution. Use higher resolution for higher quality. Higher resolution videos take up more memory.
- **Recording mode**: Select Normal, Limit for email, or Fast motion mode.

- **Video stabilization:** Activate anti-shake. Anti-shake helps to keep the focus steady when the camera is moving.
- **Location tags:** Attach a GPS location tag to the picture.
- **Storage location:** Select the memory location for storage.
- **Grid lines:** Display viewfinder grid lines to help composition when selecting subjects.
- **Voice control:** Set the camera to take pictures with voice commands.
- **Shutter sound:** Turn the shutter sound on or off.
- **The Volume key:** Use the Volume key as the camera key, the record key, or as a zoom key.
- **Review pics/videos:** Set to show pictures or videos after taking them.
- **Edit quick settings:** Touch and hold, then drag items to add them to the shortcuts menu. The following additional options are available:
  - **Effects:** Add special graphical effects.
  - **Flash:** Activate or deactivate the flash.
  - **Picture size:** Select a resolution. Use higher resolution for higher quality. Higher resolution pictures take up more memory.
  - **Timer:** Take time-delayed pictures or videos.
- **Reset settings:** Reset the camera settings.




# Clock

*The Clock app offers features for keeping track of time and setting alarms.*

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap a tab to use a feature:
  - **Alarm:** This feature allows you to set an alarm to ring at a specific time.
  - **World clock:** View the time of day or night in other parts of the world. World Clock displays time in hundreds of different cities, within all 24 time zones around the world.
  - **Stopwatch:** You can use this option to measure intervals of time.
  - **Timer:** You can use this option to set a countdown timer. Use a timer to count down to an event based on a preset time length (hours, minutes, and seconds).

## Create an Alarm




Create an alarm event. You can set one-time or recurring alarms, and choose options for how to be notified.

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Tap  **Create alarm** to configure:
  - **Time:** Choose a time for the alarm.
  - **Days:** Choose the days to use this alarm.
  - **Repeat weekly:** When enabled, the alarm repeats every week.
  - **Alarm type:** Choose whether the alarm will use sound, vibration, or vibration and sound to alert you.
  - **Alarm tone:** If you have chosen an alarm type that includes sound, choose a sound to play for the alarm.

- **Volume:** If you have chosen an alarm type that includes sound, drag the slider to set the volume of the alarm.
- **Snooze:** Allow snoozing, and set interval and repeat values for the alarm while snoozing.
- **Smart alarm:** When on, the alarm will start playing a tone at a low volume at an interval before the alarm time, and slowly increase in volume. Choose a time interval and a tone to use with smart alarm. Available when you have chosen an alarm type that includes sound.
- **Name:** Enter a name for the alarm.

3. Tap **Save**.

## Delete an Alarm

1. From a Home screen, tap  **Apps** >  **Clock**.
2. Touch and hold an alarm, and then tap  **Delete**.





# Contacts

*Store and manage your contacts with the Contacts app, which can be synchronized with a variety of your existing personal accounts, including Google, Email, Facebook, and your Samsung account.*

For more information on connecting with and managing your accounts through your device, see [Accounts](#).



## Contacts

Access your list of contacts by using the Contacts app, which is a shortcut to the Contacts tab. To access your Contacts list:

- ▶ From a Home screen, tap  **Apps** >  **Contacts**.

### Finding a Contact

You can search for a contact, or scroll the list to find one by name.









1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Search** field, and then enter characters to find contacts that match.

– or –

Tap a letter on the side of the list to jump directly to that letter in the alphabetical list. You can also press and slide across the alphabetical list to select a letter with better precision.




### Add a Contact

Use the following procedure to add a new contact.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Add**, and then tap contact fields to enter information.
  - Choose a storage account for the contact. You can store the contact on the device, the SIM card, or sync it with an account.
  - Tap  **Contact photo** to assign a picture to the new contact.
  - Enter a name, phone number, email address, and assign the contact to a group. Tap **Add another field** to add additional contact information.
    - Tap  **Add** to enter additional entries.
    - Tap  **Delete** to remove an entry.
    - Tap  **Expand** for additional fields.
    - Tap  **Label** to choose a label for the field.
3. Tap **Save**.




### Edit a Contact

When editing a contact, you can tap a field and change or delete the information, or you can add additional fields to the contact's list of information.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Edit**.
3. Tap any of the fields to add, change, or delete information.
4. Tap **Save**.




## Share a Name Card

When you share a name card, the contact's information is sent as a vCard file (.vcf). You can share a vCard via Bluetooth or Wi-Fi Direct, attach it to a message, or save it to a storage location.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **More options** > **Share name card**.
3. Choose a sharing method and follow the prompts.

## Link Contacts

When you have contacts from various sources (Gmail, Facebook, and so on), you may have multiple similar entries for a single contact. Contacts lets you link multiple entries into a single contact.





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap **Link another contact**, and then select contact(s) to link to the original contact.
4. Tap **Done**.

## Unlink Contacts

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the contact to display it, and then tap  **Link**.
3. Tap  **Separate** beside contacts to unlink them from the main contact.

## Delete Contacts





You can delete a single contact, or choose multiple contacts to delete.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Touch and hold on a contact to select it. You can also tap other contacts, or choose  **Select all**.
3. Tap  **Delete**.





## Favorites

When you mark contacts as favorites, they are easily accessible from other apps. Favorites display together on the Favorites tab in Contacts.

### Mark Contacts as Favorites




1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap a contact to display it, and then tap  **Favorite** (the star turns bright ).

### Remove Contacts from Favorites

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold on a contact to select it. You can also tap other contacts, or choose  **Select all** to select all contacts.
3. Tap  **More options** > **Remove from Favorites**.

### Create a Shortcut to a Favorite





You can create a shortcut to a favorite on the home screen, to access their information directly from the home screen.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap the **Favorites** tab, and then touch and hold on a contact to select it.
3. Tap  **More options** > **Add shortcut to home screen**. The new shortcut displays in an empty area of the home screen.





## Groups

You can use groups to organize your contacts. Your device comes with preloaded groups, and you can create your own. You might create a group for your family, for coworkers, or a team. Groups make it easy to find contacts, and you can send messages to the members of a group.





### Create a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap  **Create group**.
3. Tap fields to enter information about the group:
  - Tap **Create group in <location>** to choose where to save the group. You can save it to a specific account, to the device memory, or to all accounts.
  - Tap **Group name** to enter a name for the new group.
4. Tap **Add member** and select contact(s) to add to the new group, and then tap **Done**.
5. Tap **Save**.

### Rename a Group





1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap  **More options** > **Edit group** and enter a new name.
4. Tap **Save**.

### Add Contacts to a Group

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap  **Add member**, and then tap the contact(s) you want to add.
4. Tap **Done**.





### Send an Email to a Group

You can send an email to members of a group.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**, and then tap a group.
3. Tap  **More options** > **Send message or email**.
4. Choose **Email**.
5. Tap contacts to select them, or tap **Select all**, and then tap **Done**. Only group members that have email addresses in their records are shown.
6. Choose an account and follow the prompts.




### Delete a Group

Preset groups, such as Family, cannot be deleted.

1. From a Home screen, tap  **Apps** >  **Contacts**.
2. Tap  **Groups**.
3. Press and hold a group to select it.
4. Tap  **Delete**.
5. Tap **Group only** to delete just the group, or tap **Groups and members** to delete both the group and its members.

## Contact Settings



These settings allow you to modify settings associated with using the Contacts app.

1. From a Home screen, tap  **Apps** >  **Contacts** > **Contacts** tab.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Email





*Use the Email app to view and manage all your email accounts in one application.*

## To access Email:


- ▶ From a Home screen, tap  **Apps** >  **Email**.

## Configuring Email Accounts

You can configure Email for most accounts in just a few steps.




1. From a Home screen, tap  **Apps** >  **Email**.
2. Follow the onscreen instructions to set up your email account.
3. For additional accounts, tap  **More options** > **Settings** > **Manage accounts**.
4. Tap  **Add account**.

The device communicates with the appropriate server to set up your account and synchronize your email. When complete, your email appears in the Inbox for the account.

**Note:** To configure email account settings at any time, tap  **More options** > **Settings**. Tap **Manage accounts** and then tap the account to display Account settings.




## Refreshing Your Email Account

Refresh your account to update your email accounts.

1. From a Home screen, tap  **Apps** >  **Email**.
2. In the Application Bar, tap  **Refresh**.





## Managing Your Email Accounts

You can view email you receive for all accounts on the **Combined view** screen or you can view email accounts individually.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **Menu** at the top left of the screen to select:
  - **Combined view:** View all email in a combined inbox.
  - **<Account Name>:** View email for only this account.




## Deleting Email Accounts

To delete an Email account:

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings** > **Manage accounts**.
3. Tap  **Delete**.
4. Tap the account you want to delete, and then tap **Done**.

## Email Settings

These settings allow you to modify settings associated with using the Email app.

1. From a Home screen, tap  **Apps** >  **Email**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# GALAXY Apps


---

*Samsung GALAXY Apps is a free storefront that provides a quick and easy way to find and download apps that are compatible with your Galaxy device.*

*GALAXY Essentials is a collection of specially chosen applications available through Samsung Apps.*

*From GALAXY Essentials, you can access and download a collection of premium content, free of charge.*

## **To access the Samsung GALAXY Apps:**

- From a Home screen, tap  **Apps** >  **GALAXY Apps**.

## **To access GALAXY Essentials:**

1. Swipe across the Home screens and locate and tap the **GALAXY Essentials** widget.
2. Follow the onscreen instructions to download GALAXY Essential apps specially chosen from Samsung Apps.






**Note:** A Samsung account is required to purchase and download apps.

# Gallery

*View, edit, and manage pictures and videos.*

## View Images and Videos

Launching Gallery displays available folders. When another application, such as Email, saves an image, a Download folder is automatically created to contain the image. Likewise, capturing a screenshot automatically creates a Screenshots folder.



1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **Menu**, and then tap **Time** or **Album** to choose the way items display.
3. Tap  **Menu** > **Album**, and then tap  **More options** > **Create album** to create a new album.
4. Tap a folder to open it.
5. Tap an image or video to view it in full screen. Scroll left or right to view the next or previous image or video.

### Zoom In and Out


Use one of the following methods to zoom in or out on an image:

- Double-tap anywhere on the screen to zoom in or zoom out.
- Spread two fingers apart on any place to zoom in. Pinch the screen to zoom out.


## Playing Videos

- From a Home screen, tap  **Apps** >  **Gallery**.
- Tap a folder to open it.
  - Tap a video to view it.




### Trimming Segments of a Video

1. Select a video, and then tap  **Trim**.
2. Using the sliders at the bottom of the screen to trim the video. Move the start bracket to the desired starting point, move the end bracket to the desired ending point, and then tap **Done** to save the video.


## Editing Images

- While viewing an image, tap  **More options**:
- **Edit**: Use basic tools to edit your picture.
  - **More info**: View image details.
  - **Screen write**: Write directly on the image.
  - **Rotate left**: Rotate the picture counter-clockwise.
  - **Rotate right**: Rotate the picture clockwise.
  - **Crop**: Resize the frame to crop the image.
  - **Rename**: Rename the file.
  - **Slideshow**: Start a slideshow with the images and videos in the current folder.
  - **Add tag**: Add a tag to your image.
  - **Studio**: Edit your picture with advanced tools.
  - **Set as**: Set the image as wallpaper or as a contact's photo.
  - **Print**: Print the image via a USB or Wi-Fi connection. Some printers may not be compatible with the device.
  - **Settings**: Change the Gallery settings.

## Deleting Images





1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **More Options** > **Delete**, select images, and then tap **Done**.

– or –


When viewing a single image, tap  **Delete**.

## Sharing Images

Use one of the following methods:





1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap a folder to open it.
3. In a folder, tap  **More options** > **Select**, select images, and then tap  **Share via** to send them to others or share them via social network services.

– or –

When viewing a single image, tap  **Share via** to send it to others or share it via social network services.

## Gallery Settings

These settings allow you to modify settings associated with using your Gallery.

1. From a Home screen, tap  **Apps** >  **Gallery**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.
4. Tap  **More options** > **Add account** to add a Samsung, Dropbox, Google, or Facebook account.





# Internet

---






*Access the Internet with a fully featured web browser.*

## Access the Internet

- ▶ From a Home screen, tap  **Apps** >  **Internet**.

## Command Keys

The following command keys are available:

-  **Back** or  **Back** key to return to the previous page.
-  **Forward** to go forward to a recent page.
-  **Home** to display your Internet Home screen.
-  **Refresh** to reload the current page.

## Viewing Web Site

**To view a web site:**

- ▶ Tap the address field, enter the web address, and then tap **Go** on the keyboard.

**To share, save, or print the current web page:**

- ▶ Tap  **More options**.

**To zoom in or out:**

- ▶ Tap the screen twice or pinch the screen to zoom out and stretch the screen to zoom in.

## Browser Tabs

Use tabs to view multiple web pages at the same time.

**To open a new tab:**

- ▶ Tap  **More options** > **New tab**.

**To close a tab:**

- ▶ Tap  **Tab manager** and then tap  **Close tab**.

## Bookmarks

**To bookmark the current web page:**

- ▶ Tap  **Bookmark** >  **Add**.

**To open a bookmarked web page:**

- ▶ Tap  **Bookmarks** and tap an entry.

## History

**To view a list of recently visited web pages:**

- ▶ Tap  **Bookmarks** > **History** tab.

## Saved Pages

**To save a web page:**

- ▶ Tap  **More options** > **Save webpage**.

**To view a list of saved web pages:**

- ▶ Tap  **Saved pages**.

## Sharing Pages

**To share a web page address with others:**

- ▶ Tap  **More options** > **Share via** and follow the prompts.

## Incognito Tabs

Pages viewed with incognito tabs do not appear within your browser history or search history, and leave no traces (such as cookies) on your device.

Incognito tabs display  **Incognito** on their tab.

**Note:** Any downloaded files will remain on your device after you close the incognito tab.

**To switch to incognito mode:**




- ▶ Tap  **More options** > **Incognito mode**.

**To open a new incognito tab:**

- ▶ Tap  **More options** > **New incognito tab**.

## Internet Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **Internet**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Messages

---

*Learn how to send and receive different messages using the default Messages app on your phone.*

## Types of Messages

Your default Messaging app provides the following message types:

- Text Messages (SMS)
- Multimedia Messages (MMS)






The Short Message Service (SMS) lets you send and receive text messages to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's message service.

The Multimedia Messaging Service (MMS) lets you send and receive multimedia messages (such as picture, video, and audio messages) to and from other mobile phones or email addresses. To use this feature, you may need to subscribe to your service provider's multimedia message service.

Messaging icons are displayed at the top of the screen and indicate when messages are received and their type.

## Creating and Sending Messages

This section describes how to create and send a message using the Messaging app.

1. From a Home screen, tap  **Messages** >  **Compose**.
2. Tap the **Enter recipients** field to manually enter a recipient or tap  **Add from Contacts** to select a recipient from your Contacts. You can also select the recipient based on Groups, Favorites, or Logs.
3. If adding a recipient from your Contacts, tap the contact to place a check mark then tap **Done**. The contact will be placed in the recipients field.
4. Enter additional recipients by separating each entry with a semicolon (;) and then using the previous procedure. More recipients can be added at any time before the message is sent.  
  
For the Group option, if the number of recipients is less than 10, all members in the group will be added. You will need to delete any unnecessary members in the list by selecting the trash can icon and deleting unwanted entries.
5. Tap the **Enter message** field and use the onscreen keypad to enter a message.
6. Tap  **Add emoticons** to choose an available emoticon from an onscreen list and then add it into your message (at the cursor location) if desired.
7. Review your message and tap  **Send**.

**Note:** If you exit a message before you send it, the message is automatically saved as a draft.


## Viewing New Messages


When you receive a new message, a new message icon appears on the Status Bar.


### To view the message:

1. Open the Notification Panel and select the message. For more information, please see [Notification Panel](#).

– or –






From a Home screen, tap  **Apps** >

 **Messages**, and then tap the new message to view it.




2. To play a multimedia message (audio or video), tap  **Play**.
3. To scroll through the list of messages, tap the screen and scroll up or down the page.

## Deleting Messages

### To delete messages, follow these steps:




1. From a Home screen, tap  **Apps** >  **Messages**.
2. Tap  **More options** > **Select**.
3. Tap each message you want to delete or tap  **Select all**.
4. Tap  **Delete**.
5. At the **Delete conversations** prompt, tap **Delete** to delete or **Cancel** to cancel.

## Message Search

1. You can search through your messages by using the Message Search feature.
2. From a Home screen, tap  **Messages**.
3. Tap  **Search**.
4. Enter a word or phrase to search for, and then tap  **Search** on the keyboard.

## Messages Settings

Configure the settings for text messages, multimedia messages, push messages, and so on.

- From a Home screen, tap  **Apps** >  **Messages** >  **More options** > **Settings**.

## Emergency Alerts

This device is designed to receive wireless emergency alerts from the Commercial Mobile Alerting System (CMAS) which may also be known as the Personal Localized Alerting Network (PLAN). For more information, please contact your wireless provider.



Emergency Alerts allows customers to receive geographically-targeted messages. Alert messages are provided by the US Department of Homeland Security and will alert customers of imminent threats to their safety within their area. There is no charge for receiving an Emergency Alert message.

There are three types of Emergency Alerts:

 
- Alerts issued by the President
- Alerts involving imminent threats to safety of life (Extreme and Severe)
- AMBER Alerts (missing child alert)

Users may choose not to receive Imminent Threats (Extreme and Severe) and AMBER Alerts. Alerts issued by the President cannot be disabled.

### To disable Imminent Threats and AMBER Alerts, follow the instructions below:



1. From a Home screen, tap  **Messages**.
2. Tap  **More options** > **Settings** > **Emergency alerts**.
3. Tap **Emergency alerts**.
4. All alerts are enabled by default (check mark showing). Tap an alert option to disable it.
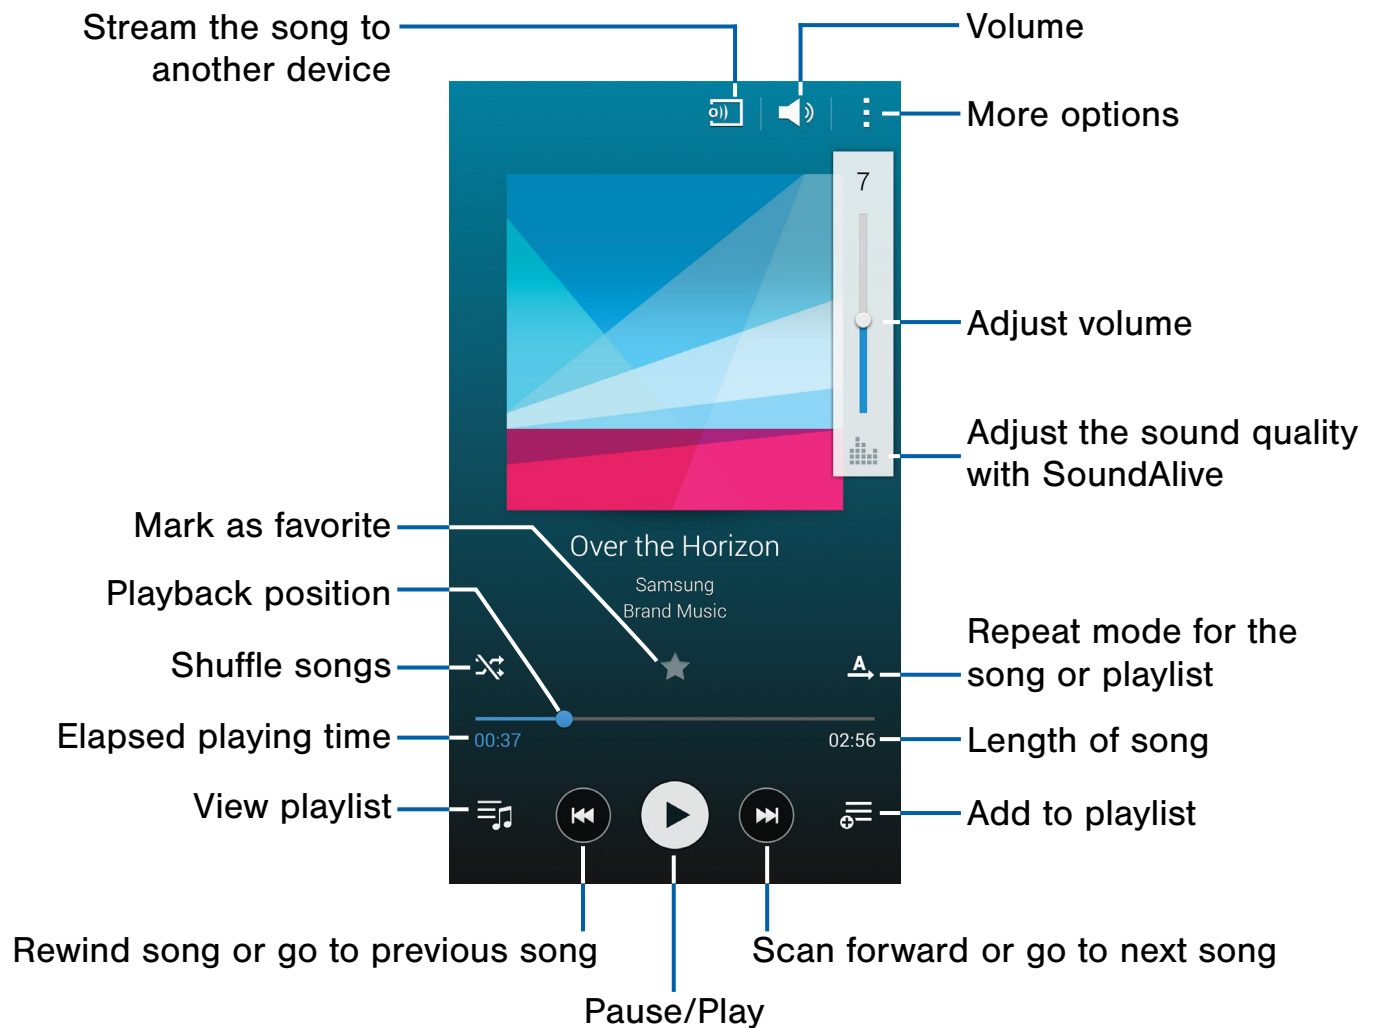
# Music Player



*Listen to your favorite songs with the Music player. Navigate through your music library, play songs, and create customized playlists.*

## Listen to Music

1. From a Home screen, tap  **Apps** >  **Music**.
2. Tap a library category at the top of the screen to view your music files.
3. Scroll through the list of songs and tap an entry to begin playback.










# My Files

---



*Access files stored on your device, including images, videos, songs, and sound clips.*

## View Files

Files stored in the device are organized into the following groups:



- **QUICK SEARCH:** Files are grouped into the following categories:
  -  **Recent files:** View recently saved files.
  -  **Images:** View image files.
  -  **Videos:** View video files.
  -  **Audio:** View audio files.
  -  **Documents:** View document files.
  -  **Downloaded apps:** View downloaded apps.
-  **DOWNLOAD HISTORY:** View all apps and files that have been downloaded to the device.
- **SHORTCUTS:** Contains shortcuts to files or folders that you have added. This option only appears if you have added shortcuts to the My Files main screen.
- **LOCAL STORAGE:** View folders and files in their storage locations.
  -  **Device storage:** View folders and files located on the device.
  -  **SD card:** View folders and files located on the memory card (if installed).
- **CLOUD STORAGE:** Contains shortcuts to FTP servers or other cloud storage locations that you have added. This option only appears if you have added shortcuts to the My Files main screen.

### To view files in My Files:

1. From a Home screen, tap  **Apps** >  **My Files**.
2. Tap a category to view the relevant files or folders.
3. Tap a file or folder to open it.




## My Files Options

On the main My Files screen, the following options are available:





-  **Search:** Search for a file or folder.
- Tap  **More options** for these options:
  - **Add shortcut:** Add a shortcut on the My Files main screen to any folder.
  - **Storage usage:** View memory information for your device and memory card (if installed).
  - **Settings:** Change the settings for viewing files.

## Category Options

After tapping on a category, the following options are available:

-  **Home**: Return to the main My Files screen.
-  **Search**: Search for a file in the selected category.
- Tap  **More options** to find the following options:
  - **Select**: Select files or folders.
  - **Create folder**: Add a folder (**Local storage** only).
  - **View as**: Change the appearance of the files or folders.
  - **Sort by**: Change the sort order of the files.
  - **Add shortcut**: Add a shortcut to the current location on either a Home screen or the My Files main screen. This option only appears in Local Storage categories.
  - **Settings**: Change the settings for viewing files.

## Options for Selected Files and Folders



- Tap  **More options** > **Select**, select a file or folder, and then use one of these functions:
  -  **Share via**: Send files to others or share them.
  -  **Delete**: Delete files or folders.
- Tap  **More options** for additional options:
  - **Move**: Move files or folders to another folder.
  - **Copy**: Copy files or folders to another folder
  - **Rename**: Rename a file or folder. This option only appears when just one file or folder is selected.
  - **Add shortcut on Home screen**: Add a shortcut to a file or folder to the Home screen.
  - **Zip**: Create a zip folder containing the selected files. This option only appears in Local Storage categories. A selected zip folder has the additional options of **Extract** and **Extract to current folder**.
  - **Details**: View details of the selected file(s) or folder(s).

# PEN.UP

---

*The Pen.Up application allows you to join an online community, follow your favorite artists, share your S Note creations, and connect with other creative people.*

Join the Pen.Up community through your Samsung, Facebook, or Google+ accounts. Share your original art, comment on others' creations, or browse for something unique to add to your personal collection.

1. From a Home screen, tap  **Apps** >  **PEN.UP**.





# S Health

---

*Use S Health to plan, track, and manage your health goals and activities, including exercise, sleep, and meals.*

**Note:** This device and related software are not intended for use in the diagnosis of disease or other conditions, or in the cure, mitigation, treatment or prevention of disease.

1. From Home, tap  **Apps** >  **S Health**.
2. Read and accept the terms and conditions.
3. Set up your health profile and goals.

## *Before You Start Exercising*

This app can be used to monitor your exercise. While moderate physical activity, such as brisk walking, is safe for most people, health experts suggest that you talk with your doctor before you start an exercise program, particularly if you have any of the following conditions:

- Heart disease;
- Asthma or lung disease;
- Diabetes, or liver or kidney disease;
- Arthritis.

You should also check with your doctor if you have symptoms suggestive of heart, lung, or other serious disease, such as:

- Pain or discomfort in your chest, neck, jaw, or arms during physical activity;
- Dizziness or loss of consciousness;

- Shortness of breath with mild exertion or at rest, or when lying down or going to bed;
- Ankle swelling, especially at night;
- A heart murmur or a rapid or pronounced heartbeat;
- Muscle pain when walking upstairs or up a hill that goes away when you rest.

Finally, the American College of Sports Medicine recommends that you see your doctor before engaging in vigorous exercise if two or more of the following apply:

- You are a man older than age 45 or a woman older than age 55;
- You have a family history of heart disease before age 55;
- You smoke or quit smoking in the past six months;
- You have not exercised for three months or more;
- You are overweight or obese;
- You have high blood pressure or high cholesterol;
- You have impaired glucose tolerance, also called prediabetes.

## *When in Doubt – Check It Out*

If you are unsure of your health status, have several health problems, or are pregnant, you should speak with your doctor before starting a new exercise program. Working with your doctor ahead of time is a good way to plan an exercise program that is right and safe for you. Consider it the first step on your path to physical fitness.

# S Note




*The S Note app helps you create, edit, and manage notes.*

*Sign in to your Samsung account to access your notes in S Note from any device.*



With S Note, create content by typing, writing, drawing, and even recording voice, video, or taking pictures. Templates are provided to make content creation easy and help keep things organized.

## Create a Note

**To create a note with S Note:**


1. From a Home screen, tap  **Apps** >  **S Note**.
2. Tap  **Create new note**.
3. Use the S Pen to create content.

**To use a template:**

1. Tap  **More options** > **Add template**.
2. When finished, tap  **Save**.

## Edit a Note

When in the S Note app, you can edit notes as follows:



1. Tap a note to view it.
2. Tap  **Edit** to edit the note.

**Note:** Action Memos behave differently from other notes. When you tap on an Action Memo to view it, you can edit the memo immediately.

## Note Tools

When creating or editing a note in S Note, some helpful modes and tools are provided.





- **Save:** Tap to save the note. The note switches to View mode. To edit the note again, tap  **Edit**.
- **Handwriting mode:** Write or draw freehand with the S Pen. Tap once to select Handwriting mode. Tap again to change the S Pen settings.
- **Eraser mode:** Erase content from the note. Tap once to select the eraser. Tap again to change the Eraser settings.
- **Text mode:** Type text using the keyboard. Tap once to select Text mode. Tap again to change the Text settings.
- **Photo note:** Add a note page by taking a picture. After you take a picture, crop the image as desired. The cropped image is then added as a page to your current note.
- **Selection mode:** Select content in the note. Tap once to use Selection mode. Tap again to switch between Lasso and Rectangle modes. Draw around the content you wish to select. Depending on the selection, several options are available to move, edit, or reshape the content.
- **Undo:** Tap to undo the last action.
- **Redo:** Tap to redo the last action.
- **S Pen (and finger) Mode:** Tap to switch between **S Pen only** edit mode and **S Pen and finger** edit mode.
-  **More options:** Tap to view more options for the note.


# Action Memos

An Action Memo is a special type of note that turns your written text into actions on your device.

For example, if someone tells you the name of a restaurant, you can launch a new memo, write the name of the restaurant, and then have the memo locate it on a map.

**Note:** While active, an Action Memo stays on the screen for as long as you are using it. You must tap either  **Save** or  **Discard** in order to close the memo.

## To open an Action Memo:

- ▶ Launch the **Air command** menu and select  **Action Memo**.


– or –



Press and hold the S Pen button and double-tap the screen with the pen.

## To edit an Action Memo:

- ▶ When you tap on an Action Memo to view it, you can edit the memo immediately.

## To link a memo to an action:

1. Write on the memo.
2. Press  **Link to action** and select an action to perform.
3. Draw around the content you want to use for the action. The selected content is boxed and highlighted.
4. On the menu bar that appears, tap the action to take. Options include Phone, Contacts, Messages, Email, Browser, Map, and Task.



For example, you can write a phone number, press  **Link to action**, and then select  **Contacts** to save the number to an existing contact or create a new contact.

# S Voice

---

*Speak commands to perform operations on your device, and to speak criteria for searches and other operations.*




*Use S Voice to find everything from directions to trivia answers to the current weather forecast.*

1. From a Home screen, tap  **Apps** >  **S Voice**.
2. Speak a command.
3. Tap the microphone icon if the device does not hear you, or to give it another command.

**Tip:** Tap  **More options** for example commands and to view a tutorial.

## S Voice Settings

These settings allow you to modify settings associated with using the Internet app.

1. From a Home screen, tap  **Apps** >  **S Voice**.
2. Tap  **More options** > **Settings**.
3. Tap an option and follow the onscreen instructions.

# Scrapbook



---

*The Scrapbook app provides a place for you to manage the multimedia content you capture with the S Pen tools.*

Scrapbook provides storage and organization tools for content you capture while using your mobile device. With the S Pen tools, you can capture articles, images, and even videos and music. You can then add a title, text, a handwritten memo, or content tags. When you capture content online, the web link is saved with the content.



## Editing the Scrapbook

Content in the Scrapbook can be edited. To open the Scrapbook:



- From a Home screen, tap  **Apps** >  **Scrapbook**.

You can edit both Categories and the content files within them.

### To edit a file:

1. Tap  **Show categories** in the top left corner.
2. Select either the category or tag that contains the file, or tap **All** to view all files.
3. Locate the file to edit and tap it to open.
4. Tap  **Edit**.
5. Change the Title, Text, Memo, or Tags as desired.
6. When finished, tap **Save**.



### To edit a Category:

1. Tap  **Show categories** in the top left corner. Categories and tags are listed in the menu, along with the number of content files contained.
2. Tap a category to open it.
3. Tap  **More options** > **Edit category**.
4. You can edit the Title and the Layout. Change them as desired.
5. When finished, tap **Done**.

 
# Smart Remote

---

*Smart Remote lets you control select Wi-Fi-enabled Samsung TV models using your Samsung Galaxy device. Now you can control all of your TV's settings, such as ON/OFF function, channel navigation, and volume control from the same Samsung device you already know.*



1. From a Home screen, tap  **Apps** >  **Smart Remote**.
2. Follow the onscreen instructions to set up and configure your entertainment equipment.
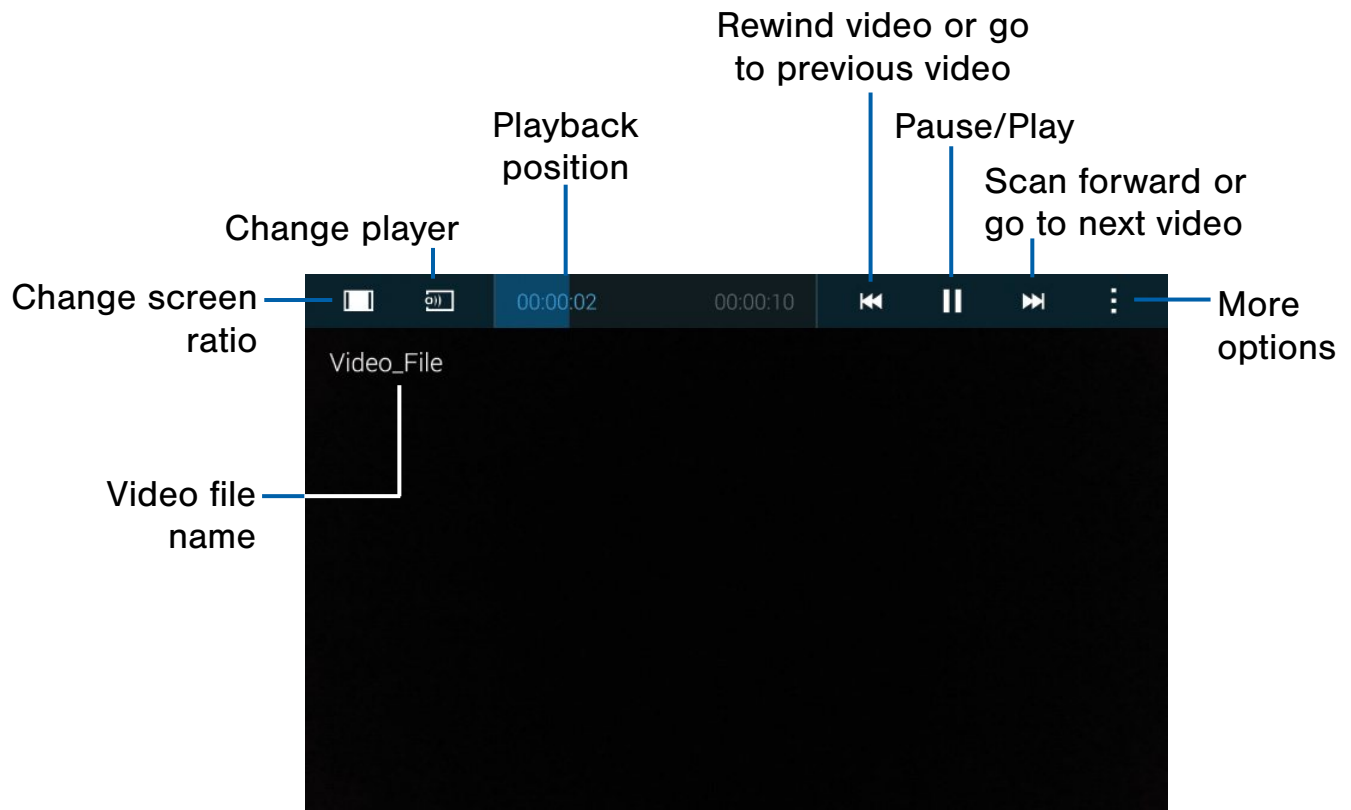
# Video Player






## *Play and manage videos stored on your device.*

### **To access video:**

1. From a Home screen, tap  **Apps** >  **Video**.
2. Scroll through the videos stored on your device. After a few seconds, each video thumbnail begins playing a preview of the clip.
3. Tap a video to view it.

## *Use Pop-Up Player*









Multi task with the Pop-Up Player by transforming the video player into a pop-up window. The video will continue to play, and the pop-up window can be resized or moved anywhere on the screen.

1. From a Home screen, tap  **Apps** >  **Video**.
2. Tap a video to view it.
3. Tap  **More options** > **Pop up player** to continue playing the video in a floating window.
  - Drag the window to any location on the screen.
  - Use two fingers to pinch or spread to resize the floating window.









# Voice Recorder

*Record voice memos and notes.*

## Create a Voice Recording

- ▶ From a Home screen, tap  **Apps** >  **Voice Recorder**.
  - Tap  **More options** > **Settings** > **Recording quality** to adjust the recording quality.
  - Tap  **Select mode** to choose the appropriate recording mode:
    - **Normal**: This recording mode picks up any sounds detected by the microphones.
    - **Interview**: The top and bottom microphones are used for two-directional recording. The top and bottom of the device pick up equal amounts of sound. Microphones can be muted during playback.
    - **Meeting**: The microphones are sensitive to sound from all directions and can distinguish up to eight sources of sound. Sound sources can be muted during playback.
    - **Voice memo**: Voice input is converted to text on screen. The maximum recording time is five minutes.
- Tap  **Record** to record an audio file.
- Tap  **Stop** to stop recording. The file is automatically saved.
- Tap  **Pause** to pause the recording of an audio file.
- Tap  **Cancel** to cancel the recording of an audio file.

## View Recordings

1. From a Home screen, tap  **Apps** >  **Voice Recorder**.
2. Tap  **List** to display a list of recordings.
3. Tap  **Search** to search through available recordings.
4. Tap  **More options**:
  - **Select**: Choose desired recordings to do the following:
    - Tap  **Share** to share a recording.
    - Tap  **Delete** to delete one or more voice recordings.
    - Tap  **More options** to choose **Change category**, **Rename**, **Set as**, **Write to Voice Label**, or view **Details**.
  - **Sort by**: Sort the list of recordings.
  - **Filter by category**: Filter entries by category.
  - **Edit categories**: Add or edit categories.
  - **Settings**: Configure Voice Recorder.






# Settings



---

*Configure your device's connections and settings, add accounts, and customize the home screen, apps, and features.*


# How to Use Settings

- Some options use an **ON/OFF** button to turn the option on (  ) or off (  ).
- For some options, you must tap a field, such as **Email address**, to display and set options.
- Some options are enabled or disabled by tapping a  check box. When enabled, a check mark displays. Tap the check mark to remove it and disable the option.

## Accessing Settings




- From a Home screen, tap  **Apps** >  **Settings**.

– or –

From a Home screen, drag down from the Status bar to display the Notification panel, and then tap  **Settings**.

## Search for Settings

If you are not sure exactly where to find a certain setting, you can use the Setting search feature.




1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **Search**.
3. Enter a word or words in the Search box. As you type, settings that match will appear on the screen.
4. Tap an entry to go to that setting.

## Customize the Quick Settings Menu

Quick settings are the settings that you are most likely to frequently use. When you first access the Settings menu, the Quick settings are set to a default list of settings.




### *Changing the Quick Settings*

You can change the Quick settings list to include your most frequently used settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **More options** > **Edit quick settings**.
  - Select additional settings to appear in your Quick settings menu. Settings that are already in the Quick settings menu are checked.
  - Uncheck an item to remove it.
  - Check an item to add it to the Quick settings menu.
3. Tap **Done** to save your new Quick settings menu.

## Change How Settings Are Listed

Settings can be listed in a list view or a tab view (default).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap  **More options** > **View as**.
3. Select a different view.



# Wi-Fi and Wi-Fi Direct

*Wi-Fi is a term used for certain types of Wireless Local Area Networks (WLAN). Wi-Fi communication requires access to a Wireless Access Point (WAP).*



*Wi-Fi Direct creates a direct connection between two or more devices using Wi-Fi.*


## Turn Wi-Fi On or Off

Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on or off.

## Scan and Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. When Wi-Fi is first turned on, your device will automatically scan for available networks and display them.

4. Tap the network you want to connect to.
  - When you select an open network, you are automatically connected to the network. Otherwise, enter a password to connect.
  - To manually scan for networks, tap  **More options** > **Scan**.

## Manually Connect to a Wi-Fi Network

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap **Add Wi-Fi network**.
4. Enter information about the Wi-Fi network:
  - Tap **Network SSID** to enter the name of the Wi-Fi network.
  - Tap the **Security** field and select a security option and enter your password.
  - Tap **Show advanced options** if you need to add advanced options such as Proxy settings, IP settings, or Key management.
5. Tap **Connect** to store the new information and connect to your target WAP.

## Wi-Fi Status Indicators

These Status bar icons show your current Wi-Fi connection status:






Displays when Wi-Fi is connected, active, and communicating with a Wireless Access Point (WAP).



A Wi-Fi access point is available, but your device is not connected to it. It may also display if there is a communication issue with the target Wireless Access Point (WAP).

## Wi-Fi Settings






The Wi-Fi settings menu allows you to set up many of your device's advanced Wi-Fi services.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on.
3. Tap  **More options** for options:
  - **Scan**: Start another scan for nearby Wi-Fi networks.
  - **Wi-Fi Direct**: Configure a Wi-Fi Direct connection with a nearby device.
  - **Advanced**:
    - **Network notification**: Receive a notification when new Wireless Access Points (WAPs) are available.
    - **Passpoint**: Connect to passpoint-enabled Wi-Fi Access Points automatically.
    - **Sort by**: Sort Wi-Fi networks by Alphabet or Signal strength.
    - **Keep Wi-Fi on during sleep**: Specify when to disconnect from Wi-Fi.
    - **Always allow scanning**: Allow Google location service and other apps to scan for networks, even when Wi-Fi is turned off.
    - **Install certificates**: Install authentication certificates.
    - **MAC address**: View your device's MAC address, which is required when connecting to some secured networks (not configurable).
    - **IP address**: View your device's IP address (not configurable).
  - **WPS push button**: Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.

- **WPS PIN entry**: View the PIN used by your device to set up a PIN-secured connection to a Wi-Fi router or other equipment (not configurable).
- **Share Wi-Fi profile**: Share Wi-Fi profiles you have created with others.
- **Help**: Learn about setting up and using Wi-Fi networks, and other settings.

## Wi-Fi Direct

Wi-Fi Direct allows direct device-to-device connections via Wi-Fi, without having to connect to a Wi-Fi network.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Wi-Fi**, and then tap **ON/OFF** to turn Wi-Fi on. Wi-Fi must be on to configure settings.
3. Tap  **More options** > **Wi-Fi Direct**. Your device automatically scans for nearby Wi-Fi Direct devices, or you can tap **Scan** to start scanning.
4. After scanning for devices, select a device, and then follow the prompts to complete the connection.
  - Tap  **More options** > **Multi connect** to scan for devices that support multi connect. Select the devices and follow the prompts to establish the connections.
  - To rename your device (as seen by other devices), tap  **More options** > **Rename device**.

### Wi-Fi Direct Status Indicator



Displays when connected to another device using Wi-Fi Direct.



# Download Booster

---

*Download Booster improves download speed by using both Wi-Fi and LTE networks at the same time when downloading files over 30 MB in size.*

**Note:** Download Booster uses mobile data services.

## **To turn on Download Booster:**

1. From a Home screen, tap  **Apps** >  **Settings** > **Download booster**.
2. Tap **ON/OFF** to turn Download Booster on or off.

## **If you want to turn off download speed info:**

- ▶ Tap the check box next to **Do not show speed info**.



# Bluetooth

---

*Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car Bluetooth systems, and Bluetooth-enabled computers, printers, and wireless devices.*




**Note:** The Bluetooth communication range is approximately 30 feet.

## Turn Bluetooth On and Off

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on or off.




## Change Your Device's Name

Change the name others will use when pairing with your device via Bluetooth.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** >  **More options** > **Rename device**.
3. Tap **Device name** and edit your device name.



## Making Your Device Visible to Other Bluetooth Devices

When you make your device visible, other Bluetooth can find it in a scan and initiate pairing. You can choose the length of time your device remains visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn Bluetooth on.
3. Tap **Bluetooth** >  **More options** > **Visibility timeout**.
4. Select a time period for your device to remain visible after you turn on visibility.

## Scan for Bluetooth Devices



When you want to pair with another Bluetooth device, you can scan for nearby devices that are visible.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. When Bluetooth is first turned on, it scans for nearby Bluetooth devices and displays them.
  - To manually perform a new scan, tap **Scan**.

## Pair Bluetooth Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device.



Pairing between two Bluetooth devices is a one-time process. Once a pairing is created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Make sure that the target device is discoverable, so that your device can find it. Refer to the instructions that came with the device to find out how to set it to discoverable mode.
4. Tap **Scan**. Your device will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, tap the name. Your device then automatically tries to pair with the target device. If automatic pairing fails, enter the passcode supplied with the target device.

**Note:** Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth compatible devices.


### *Disconnect a Paired Device*

Disconnecting a paired device breaks the connection between the device and your device, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth**, and then tap **ON/OFF** to turn on Bluetooth.
3. Tap the previously paired device.
4. Tap **OK** to confirm disconnection.




### *Delete a Paired Device (Unpairing)*

When you unpair from a Bluetooth device, the two devices will no longer recognize each other. To connect again, you'd need to pair the devices.


1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap  **Settings** next to the previously paired device, and then tap **Unpair** to delete the paired device.

## Review Files Received via Bluetooth

When you receive files from another device via Bluetooth, you can access them from Bluetooth settings.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Bluetooth** >  **More options** > **Received files**.

## Bluetooth Status Indicators

The Status bar displays  when Bluetooth is turned on.



# Tethering and Mobile HotSpot

---

*Share your device's Internet connection with a computer that connects to your device using a USB cable or via Bluetooth.*

*Use Mobile HotSpot to share your device's Internet connection with other devices using your device as a Mobile HotSpot.*

## Connect Your Device to a Computer Using Tethering

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot**.
3. Choose a tethering method:
  - **Mobile HotSpot**: Turn your phone into a portable Wi-Fi Hotspot to share your mobile data connection with other devices.
  - **Mobile HotSpot range**: Chose from standard or high.
  - **USB tethering**: Connect the computer to the device using the USB cable, and then touch **USB tethering** to turn tethering on.



## Use Your Device as a Mobile HotSpot

**Note:** You must have a tethering plan on your service account in order to use the Mobile HotSpot.

**Warning!** Mobile HotSpot consumes battery power and uses data service.

### *Turn Mobile HotSpot On or Off*

Activate your device's Mobile HotSpot application to allow other devices to use your device's Internet connection.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot** > **Mobile HotSpot**.
3. Tap **ON/OFF** to turn the feature on or off.

**Warning!** By default, your device's Mobile HotSpot has no security applied, and any device can connect. For more information, see [Configure Mobile HotSpot Settings](#).



## Connect a Device to Your Mobile HotSpot





Use the other device's Wi-Fi control to connect to your device's Mobile HotSpot.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot** > **Mobile HotSpot**.
3. Tap **ON/OFF** to turn on Mobile HotSpot.
4. Activate Wi-Fi on the target device.
5. Scan for mobile hotspots, and select the target device from the list.
6. On the target device, enter your device's Portable Wi-Fi hotspot password. By default, the password is your device's phone number.




## Allowed Device List

Control whether devices connect to your Mobile HotSpot with the Allowed device list. After you add devices to the list, they can scan for your device and connect using your device's Mobile HotSpot name and password.

**Note:** Using your device as a Mobile HotSpot consumes battery power and uses data service. While Mobile HotSpot is active, your device's applications will use the Mobile HotSpot data service. Roaming while using your device as a Mobile HotSpot will incur extra data charges.




1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot** > **Mobile HotSpot**.
3. Tap **ON/OFF** to turn on the feature.
4. Tap  **More options** > **Allowed devices**, and then tap  **Add** to enter the other device's Device name and MAC address.
5. Tap **OK** to add the device.

## Change the Mobile HotSpot Password

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot** > **Mobile HotSpot**.
3. Touch **ON/OFF** to turn on the feature.
4. Tap  **More options** > **Configure**.
5. Tap the **Security** field and select **WPA2 PSK** and enter a new password.

## Configure Mobile HotSpot Settings

Manage your Mobile HotSpot security and connecting settings.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Tethering and Mobile HotSpot** > **Mobile HotSpot**.
3. Tap  **More options** > **Configure** to display options:
  - **Network SSID:** View and change the name of your Portable Wi-Fi hotspot.
  - **Broadcast network name (SSID):** Allow other devices to see your network name.
  - **Security:** Choose the security level for your Portable Wi-Fi hotspot.
  - **Password:** If you choose a security level that uses a password, enter the password. By default, the password is your device's phone number.
  - **Show password:** Display your password instead of masking it.
  - **Show advanced options:** Access advanced options, including Broadcast channel, to specify the channel your device uses for Portable Wi-Fi hotspot, Maximum connections, and Timeout settings.

# Airplane Mode

---

*Airplane mode disconnects your device from all networks and turns off connectivity features, such as phone calls and Wi-Fi.*

*While in airplane mode, you can use other features, such as playing music, watching videos, and other online applications.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Airplane mode**.
3. Tap **ON/OFF** to enable or disable the option.




**Note:** You can also control Airplane mode from the Device options menu. Press and hold the **Power/Lock** key, and then tap **Airplane mode**.

# Data Usage

---

## *Monitor your mobile data usage.*



**Note:** Your service provider may account for data usage differently.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Data usage** for options:
  - **Mobile data:** Enable mobile data. You can also control Mobile Data at the Notification panel.
  - **Set mobile data limit:** Disable your mobile data connection when the specified limit is reached. Drag the red limit line to set the data usage limit.
  - **Data usage cycle:** Tap the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
  - **Upgrade data service:** Explore data plan upgrade options for your rate plan.
3. Tap  **More options:**
  - **Data roaming:** Enable data roaming on your device.
  - **Restrict background data:** Restrict some apps and services from working unless you are connected to a Wi-Fi network.
  - **Auto sync data:** Set your accounts to automatically sync.
  - **Show Wi-Fi usage:** Display a Wi-Fi tab that shows Wi-Fi usage.
  - **Mobile HotSpots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

# Location Services



*Some apps, such as Google maps, may require one or more location services be turned on for full functionality.*

## Locating Method

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Mode** to select how your location is determined:
  - **High accuracy:** Use GPS, Wi-Fi, and mobile networks.
  - **Power saving:** Use Wi-Fi and mobile networks (no GPS).
  - **GPS only:** Use GPS only.



## Recent Location Requests

Apps that have requested your location are listed under Recent location requests.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap an entry to view the app's settings.






## Location Reporting

Google uses Location Reporting to store and use your device's most recent location data. Google apps, such as Google Maps, can use this data to improve your search results based on places that you have visited.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **Google Location Reporting** for options:
  - **Location Reporting:** Allow Google apps to use your device's most recent location data.
  - **Location History:** Allow Google to store a history of your location data. Tap **DELETE LOCATION HISTORY** to permanently delete your location history.

## My Places

You can save your favorite locations for use with services that require location information. This information can improve your search results and other location-related activities.

1. From a Home screen, tap  **Apps** >  **Settings** > **Location**.
2. Tap **ON/OFF** to turn on Location services.
3. Tap **My places**.
  - Tap a category (Home, Work, Car, School, or Gym) to add a location.
  - Tap  **Add** to add additional categories.
  - To delete a custom category, tap  **More options** > **Select**, tap the category to delete, and tap  **Delete**.



**Note:** Home, Work, Car, School, and Gym cannot be deleted.

# More Networks

*The More Networks settings allow you to configure a variety of communication settings for your device.*



## Default Messaging App

If you have multiple messaging apps installed, you can select which app should be your default messaging app.

1. From a Home screen, tap  **Apps** >  **Settings** > **More networks** > **Default messaging app** to select a default.

## Mobile Networks

Control your device's access to networks and mobile data service.




1. From a Home screen, tap  **Apps** >  **Settings** > **More networks** > **Mobile networks** for options:
  - **Mobile data:** Allow your device to connect to a mobile data network.
  - **Data roaming:** Allow your device to connect to data services while roaming. Significantly higher charges may result.
  - **Access Point Names:** Select the Access Point Name for mobile connection to the Internet.
  - **Network mode:** Choose a preferred network mode.
  - **Network operators:** Choose available and preferred networks.

## Virtual Private Networks (VPN)



Set up and manage your Virtual Private Networks (VPNs).

**Note:** You must set a screen lock PIN or password before setting up a VPN. For more information, see [Lock Screen](#).



### Adding a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More networks** > **VPN**.
2. Tap **Basic VPN** or **Advanced IPsec VPN**.
3. Tap  **Add** and follow the prompts to set up your VPN.

### Connect to a VPN

1. From a Home screen, tap  **Apps** >  **Settings** > **More networks** > **VPN**.
2. Tap either **Basic VPN** or **Advanced IPsec**.
3. Tap the VPN, enter your log in information, and tap **Connect**.

### Edit or Delete a VPN



1. From a Home screen, tap  **Apps** >  **Settings** > **More networks** > **VPN**.
2. Tap either **Basic VPN** or **Advanced IPsec**.
3. Touch and hold the VPN that you want to edit or delete.
4. Tap either **Edit network** or **Delete network**.

# Wi-Fi Calling

Your device is equipped with Wi-Fi Calling functionality.

**Note:** Wi-Fi Calling is a service provided by your mobile carrier. Please contact your mobile service provider for details on cost and functionality.

## To configure Wi-Fi Calling:



1. From a Home screen, tap  **Apps** >  **Settings** > **More networks**.
2. Tap the **ON/OFF** button next to **Wi-Fi Calling** to either enable or disable this feature.
3. Tap **Wi-Fi Calling** > **Connection Preferences** to select which call types you prefer (Wi-Fi or cellular).

# Sharing Files with NFC

---



*NFC (Near Field Communication) allows data exchange when you touch your device with another compatible device. This is used for applications such as Android Beam and S Beam.*

## To activate NFC:

1. From a Home screen, tap  **Apps** >  **Settings** > **NFC**.
2. Tap **ON/OFF** to turn NFC on.

## Android Beam



When Android Beam is activated, you can beam app content to another NFC-capable device by holding the devices close together. You can beam browser pages, YouTube videos, contacts, and more.

1. From a Home screen, tap  **Apps** >  **Settings** > **NFC**.
2. Tap **ON/OFF** to turn NFC on.
3. Tap **Android Beam** and then tap **ON/OFF** to turn Android Beam on.
4. Touch the back of your device with another NFC-capable device and the content is transferred.

## S Beam



When S Beam is activated, you can beam files to another NFC-capable device by holding the devices close together.

You can beam images and videos from your Gallery, music files from your Music app, and more.

1. From a Home screen, tap  **Apps** >  **Settings** > **NFC**.
2. Tap **ON/OFF** to turn NFC on.
3. Tap **S Beam** and then tap **ON/OFF** to turn S Beam on.
4. Touch the back of your device with another NFC-capable device and the content is transferred.

## Tap and Pay

Tap and pay allows you to select the default payment application you want to use for making on-phone purchases.




1. From a Home screen, tap  **Apps** >  **Settings** > **NFC**.
2. Tap **ON/OFF** to turn NFC on.
3. Tap **Tap and pay**.
4. Select the app that you want as your default.

# Nearby Devices

---

*Share your media files with nearby devices via Wi-Fi, Wi-Fi Direct, or Mobile Hotspot.*

**Warning!** If file sharing is enabled, other devices can access your data. Use this option with care.



1. From a Home screen, tap  **Apps** >  **Settings** > **NFC** > **Nearby devices**.
2. Tap **ON/OFF** to enable Nearby devices.
3. Set the following options:
  - **Content to share:** Select the content to share. Choices are: Videos, Photos, and Music.
  - **Allowed devices:** Indicate the devices accessible to your device.
  - **Denied devices:** Indicate devices not allowed access to your device.
  - **Download to:** Allow downloading of data to your device or optional memory card (not included).
  - **Receive files from other devices:** Warn if a device attempts to upload data to your device.
4. Tap  **More options** > **Rename device** to rename your phone.



# Printing

---

*Print images and documents to Samsung printers and other compatible printers (not included).*



1. From a Home screen, tap  **Apps** >  **Settings** > **Printing**.
2. Tap a print service and follow the prompts.

**Note:** Tap **Download plug-in** to install additional print service drivers.

# Screen Mirroring

---

## *Share Your Device's Screen with Another Device.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Screen Mirroring**.
2. Tap **ON/OFF** to enable Screen Mirroring.  
Available devices are listed.
3. Tap **Scan** to find more devices.
4. Tap a device and follow the prompts to connect.

# MirrorLink

---

*Mirror your device's display on your car's display screen using a USB connection. To use this feature, your car system must support MirrorLink.*

## **To turn on MirrorLink:**

1. Connect your device to your car's system using the USB cable.
2. From a Home screen, tap  **Apps** >  **Settings** > **MirrorLink**.
3. Tap **Connect to vehicle via USB**.



# Sound Settings

*Configure the sounds and vibrations used to indicate notifications, screen touches, and other activities.*

## Change the Sound Mode

You can switch between sound modes, while preserving the individual sound settings you've made.



**Tip:** Sound modes are also available from the Device options menu. Press and hold the **Power/Lock** key, and then choose Mute, Vibrate, or Sound from the Device options.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Sound mode**, and then choose a mode:
  - **Sound:** Your device uses the sounds, vibrations, and volume levels you've chosen in Sound settings for notifications and alerts.
  - **Vibrate:** Your device vibrates for notifications and alerts. This uses the Vibration intensity you choose in Sound settings.
  - **Mute:** Your device plays no sounds or vibrations. Onscreen reminders will still occur.

## Adjust the Volume



Set the system volume level, and set default volume for call ringtones, notifications, and other audio.

**Tip:** You can also set System volume from the home screen by pressing the **Volume** key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Volume**, and then drag the sliders to set the default volume for:
  - Ringtone
  - Music, video, games, and other media.
  - Notifications
  - System



## Vibration Intensity

Set the vibration intensity of incoming calls, notifications, and Haptic feedback.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Vibration intensity**, and then drag the sliders to set the default volume for:
  - Incoming call
  - Notifications
  - Haptic feedback
3. Tap **OK** when finished.

## Select a Default Ringtone

Choose from preset ringtones or add your own.



1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Ringtones**.
3. Tap a ringtone to hear a preview, and then tap **Done** to set it as your default ringtone.

– or –

Tap **Add** to use a use an audio file as a ringtone.

## Select a Default Vibration Pattern

Choose from preset vibration patterns or create your own pattern.



1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Vibrations**.
3. Tap a pattern to preview it, and then tap **OK** to set it as your default vibration pattern.

– or –

Tap **Create** and follow the prompts instructions to create a new vibration pattern.



## Change the Notification Sound

Choose a sound for notifications, such as for new messages and event reminders.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Notifications**.
3. Tap a sound to preview it, and then tap **Done** to set it as your default notification sound.



## Vibrate When Ringing

Your device can vibrate in addition to ringing when you receive a call.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Vibrate when ringing** to turn the feature on.



## Play Tones When Entering a Phone Number

Play tone when the dialing keypad is tapped.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Dialing keypad tone** to turn the feature on.



## Play Tones When Touching or Tapping the Screen

Play tones when you touch or tap the screen to make selections.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Touch sounds** to turn the feature on.


## Set the Screen Lock Sound

Play a sound when you unlock the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Screen lock sound** to turn the feature on.



## Use Haptic Feedback

Set the device to vibrate when you tap the Back key and Recent apps keys, and for certain screen interactions.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap **Haptic feedback** to turn the feature on.

## Play a Sound When Using the Samsung Keyboard



Play a tone when keys are tapped on the Samsung Keyboard.

1. From a Home screen, tap  **Apps** >  **Settings** > **Sound**.
2. Tap each option to activate the feature:
  - **Sound when tapped:** Enables auditory feedback when you touch an onscreen key.
  - **Vibrate when tapped:** Enables the device to vibrate when you touch an onscreen key.

# Display Settings

## Adjust the Screen Brightness



Adjust the screen brightness to suit your surroundings or personal preference. You may also want to adjust screen brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Brightness** for options:
  - Tap **Automatic brightness** to allow the device to adjust brightness automatically.
  - To set a custom brightness level, clear the Automatic brightness check mark and drag the **Brightness level**.

**Note:** You can also control Brightness from the Notification panel. Drag down the Status bar at the top of the screen to find the Brightness options.



## Change the Font Style and Size

You can set the font style and size for all text that displays on the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Font** to choose a Font style and Font size.
  - Tap **Download** to find new fonts from the Google Play Store.



## Automatically Rotate the Screen

Use the front camera to rotate the screen based on the orientation of your face.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Screen rotation** to turn the feature on.



## Smart Stay

Using the front camera to detect your face, the screen will not time out as long as you are facing the screen.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Smart stay** to turn the feature on.



## Set the Screen Timeout Delay

Choose how long the display screen remains lit after you tap the screen or press any key.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Screen timeout**, and then choose a time period.

## Select a Screen Mode

Choose a screen mode to match your type of viewing. You can choose to have the device automatically adapt the display depending on the type of image being displayed, and other criteria such as battery level.



1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Screen mode**, and then choose a screen mode.
  - To have your device automatically optimize the display to match the type of image being displayed and other criteria, such as battery level, tap **Adaptive display**.

– or –

Choose a specific type of screen mode based on what you are viewing.







## Auto Adjust the Screen Tone

Your device will analyze the images displayed on the screen and automatically adjusts the brightness to conserve battery power.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Auto adjust screen tone** to turn the feature on.



## Daydream (Screen Saver)

The Daydream setting controls what the screen displays when the device is docked (dock not included), or while charging. You can choose to display colors, or display photos stored on your device.


1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Daydream**.
3. Tap **ON/OFF** to turn Daydream on. Configure options:
  - **Colors**: Tap the selector to display a changing screen of colors.
  - **Flipboard**: Display pictures from Flipboard. Tap  **Settings** for options.
  - **Google Photos**: Display pictures from your Google Photos account. Tap  **Settings** for options.
  - **Photo Frame**: Display pictures in a photo frame. Tap  **Settings** for options.
  - **Photo Table**: Display pictures in a photo table. Tap  **Settings** for options.
4. Tap **Preview** to see a demonstration of Daydream.
5. Tap **Select when to daydream** and tap **While docked**, **While charging**, or **Both**.



## Configure the LED Indicator

Select which functions (such as charging or low battery) the LED indicator on the front of the device will display.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **LED indicator** for options.



## Set the Touch Key Light Duration

Set the length of time the  **Recent apps key** and  **Back key** remain lit after you touch them.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Touch key light duration** to choose a timeout period.

## Increase the Touch Sensitivity of the Screen

Increase the sensitivity of the touch screen to improve results when wearing gloves.

1. From a Home screen, tap  **Apps** >  **Settings** > **Display**.
2. Tap **Increase touch sensitivity** to turn the feature on.





# Wallpaper

---

*Change the look of the home and lock screens with wallpaper.*

You can display a favorite picture or choose from preloaded wallpapers.

1. From a Home screen, tap  **Apps** >  **Settings** > **Wallpaper**.
2. Tap **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Tap an image to preview it, and then tap **Set as wallpaper**.
  - Tap **From Gallery** to select an image from the Gallery.
  - Tap **Bubbles** or **Phase beam** for animated wallpaper. (Animated wallpaper consumes additional battery power).
  - Tap **Live weather** or **My interests** to set up those options (Lock screen only).



For more information, see [Change the Wallpaper](#).

# Lock Screen

---

*Choose a method for unlocking your screen. Different Screen Locks have different levels of security and options.*

## Set a Screen Lock

1. From a Home screen, tap  **Apps** >  **Settings** > **Lock Screen**
2. Tap **Screen lock** to select a screen lock and level of security:
  - **Swipe:** Swipe the screen to unlock it. This option provides no security.
  - **Pattern:** A screen unlock pattern is a tap gesture you create and use to unlock your device. This option provides medium security.
  - **PIN:** Select a PIN to use for unlocking the screen. This option provides medium to high security.
  - **Password:** Create a password for unlocking the screen. This option provides high security.
  - **Fingerprint:** Use fingerprint recognition to unlock the screen. This option provides medium to high security.
  - **None:** Never use a Lock screen.

## Screen Lock Options

### All Screen Locks

- **Show information:** Display information on the Lock screen.
- **Camera shortcut:** Display a camera shortcut on your Lock screen.
- **Action memo on lock screen:** Double tap the lock screen while pressing the pen button to open Action Memo.

### Swipe Only

- **Unlock effect:** Set the visual effect used when unlocking the screen.

### Pattern Only

- **Pattern type:** Select a pattern type.
- **Make pattern visible:** Display the pattern as you draw it.
- **Vibration feedback:** Vibrate when the unlock pattern is entered incorrectly.

### Pattern, PIN, Password, and Fingerprint



- **Lock automatically:** Set a time-out for lock screen.
- **Lock instantly with power key:** Lock the screen by pressing the Power/Lock key.

# Multi Window Settings

---

*Turn on the Multi window feature.*

For more information, see [Using Multi Window](#).

1. From a Home screen, tap  **Apps** >  **Settings** > **Multi window**.
2. Tap **ON/OFF** to enable.
3. Tap **Open in split screen view** to automatically view content in split screen when you open files from My Files or Video, or attachments from email. The applications must support Multi window.
4. Tap **Pop-up view shortcut** to be able to swipe down diagonally from the corner of a window to put it in pop-up view.



**Note:** These features only work on apps that support Multi Window functionality.

# Notification Panel



---

*Customize which Quick setting buttons appear on the Notification Panel.*

*You can also customize which apps appear on the Recommended applications menu on the Notification panel when you perform certain actions, such as plugging in earphones.*

► From a Home screen, tap  **Apps** >  **Settings** > **Notification panel**.

– or –

From the Notification panel, tap  **View all** >  **Edit**.

**To customize which quick setting buttons appear at the top of the Notification Panel:**

► Tap and drag buttons to between the ACTIVE BUTTONS and AVAILABLE BUTTONS trays to reorder them.



**To use the default layout:**

► Tap **Reset**.


# Edge Screen Settings

---


*Manage the panels that display on the Edge screen, including your own custom panels, and set up night mode.*

► From a Home screen, tap  **Apps** >  **Settings** > **Edge screen**.

– or –

Swipe upward on the Edge screen and then tap  **Settings**.

The following options are available:

- **Manage panels:** Check the panels that you want to display on the Edge screen.
- **Express me:** Tap  **Create new** to create a new Edge screen panel.
- **Information stream:** Select which notifications are shown on the Information stream panel, and set the screen timeout.
- **Night clock:** Set up a clock that displays when the phone screen is off. Night mode is available for a maximum of 12 hours.

- **Personal message:** Type a personal message to display on the Edge screen.
- **Rotate 180°:** Rotate the Edge screen when the device is rotated 180°.



For more information, tap  **More options** > **Help**, or see [Edge Screen](#).

# One-Handed Operation

---

*Change the screen layout to accommodate operating your device with one hand.*

**To enable One-Handed Operation features:**



1. From a Home screen, tap  **Apps** >  **Settings** > **One-handed operation**.
2. Tap any of the following features and then tap **ON/OFF** for each to turn it on or off:
  - **Reduce screen size:** Reduce the screen size so that you can reach all parts of the screen with one hand.
  - **One-handed input:** Adjust the size and position of the dialing keypad, in-call buttons, Samsung keyboard, Calculator, and unlock pattern (if configured).
  - **Side key panel:** Activate a panel of buttons that includes the Home key, Recent apps, and Back key. The panel appears at the side of the screen. When enabled, you can customize the transparency, minimize behavior, and keys that appear on the panel.

# Easy Mode

---

*Switch between the default screen layout and a simpler layout. The Easy Mode layout has larger text and icons, making for a more straightforward visual experience.*

## **To enable Easy Mode:**

1. From a Home screen, tap  **Apps** >  **Settings** > **Easy mode**.

2. Tap **Easy mode** to enable this feature.



When Easy mode is enabled, you can scroll down the page and select which apps you want to appear on the Home screens. Tap the check box next to the apps you want to add or remove.

3. When finished, tap **Done**.

# Accessibility

*Accessibility services are special features that make using the device easier for those with certain physical disabilities.*

**Note:** You can download additional accessibility applications from the Google Play Store.

1. From a Home screen, tap  **Apps** >  **Settings**.

2. Tap **Accessibility** for options:

## Vision

- **TalkBack:** Speak feedback aloud to help blind and low-vision users.

**Note:** TalkBack can collect all of the text you enter, except passwords, including personal data and credit card numbers. It may also log your user interface interactions with the device.

- **Dark screen:** Keep the screen turned off at all times for privacy. This feature is available when TalkBack is enabled.
- **Rapid key input:** Release your finger to enter selection instead of double tapping. This feature is available when TalkBack is enabled.
- **Speak passwords:** Read the characters aloud as you enter your passwords. This feature is available when TalkBack is enabled.
- **Font size:** Set the font size.
- **Magnification gestures:** Use exaggerated gestures such as triple-tapping, double pinching, and dragging two fingers across the screen.
- **Hover zoom:** Magnify content by hovering the S Pen over it.

- **Notification reminder:** Play a beep when a notification for a call, message, and so on, has been missed.
- **Negative colors:** Reverse the display of onscreen colors from White text on a Black background to Black text on a White background.
- **Color adjustment:** Adjust the color of the screen if you are color blind or have difficulty reading the display because of the screen color. Tap **Color adjustment** for options.
- **Accessibility shortcut:** Quickly enable accessibility features in two quick steps. Tap **ON/OFF** to turn the feature on.
- **Text-to-speech options:** Set your preferred TTS engine and options. For more information, see [Text-To-Speech Options](#).

## Hearing

- **Flash notification:** Set your camera light to blink whenever you receive a notification.
- **Turn off all sounds:** For privacy, turn off all notifications and audio.
- **Hearing aids:** Improve the sound quality of your device for use with hearing aids.
- **Samsung subtitles (CC):** Use Samsung subtitles with multimedia files when available. Tap Samsung subtitles (CC) for options.
- **Google subtitles (CC):** Use Google subtitles with multimedia files when available. Tap Google subtitles (CC) for options.
- **Sound balance:** Use the slider to set the Left and Right balance when using a stereo device.
- **Mono audio:** Switch audio from stereo to mono for use with one earphone.
- **Sound detectors:** Receive alerts when the phone detects the doorbell or a baby crying.



- **Auto haptic:** The device will vibrate in time to the sound when listening to music, watching videos, or playing games. It will also vibrate when buttons are tapped in supported apps. This may consume battery power, and not all applications will support this feature.

### Dexterity and Interaction

- **Assistant menu:** Improve the device accessibility for users with reduced dexterity.
- **Air wake up:** Move your hand above the sensor to turn the screen on.
- **Press and hold delay:** Select a time interval for this tap gesture.
- **Interaction control:** Block areas of the screen from touch interaction. Disable Auto rotate screen and hardkey functions. Only show application notifications in the Notification Panel and the Status bar.

### More Settings

- **Direct Access:** Open your accessibility settings by pressing the Home Key three times in quick succession.
- **Answering/ending calls:** Choose shortcuts for answering and ending calls.
- **Single tap mode:** Tap to stop/snooze alarms and calendar events.
- **Manage accessibility:** Export your accessibility settings and share them with another device.



### Services


Additional accessibility apps may be downloaded from the Google Play Store. Certain accessibility services you install may be configured here.

# Blocking Mode

---

*Turn off notifications for selected features.*

1. From a Home screen, tap  **Apps** >  **Settings** > **Blocking mode**.
2. Tap **ON/OFF** to turn the feature on and configure the following options:
  - Tap **Block incoming calls** to block all calls except for the people on your allowed list.
  - Tap **Disable notifications** to block all notifications.
  - Tap **Disable alarm and timer** to block all alarms.
  - The SET TIME option allows you to set Blocking mode for a specific time range or to keep it always on.
    - Tap the **Always** field to disable it and configure the **From** and **To** time fields.
  - **Allowed contacts**: Add contacts to your allowed list.
  - **Allowed contact list**: Manage your allowed list.
  - **Allowed contact groups**: Manage groups on your allowed list.

**Note:** When Blocking Mode is enabled,  displays in the Status Bar.

# Private Mode



---

*Hide personal content from being accessed by anyone else using your device.*

*Private mode is only available for certain applications.*

**Note:** A secure screen lock (Pattern, PIN, Fingerprint, or Password) is required to use Private Mode.

## Set Up Private Mode

1. From a Home screen, tap  **Apps** >  **Settings** > **Private mode**.
2. Follow the prompts to learn about and set up Private mode.

# Finger Scanner






---

*Use fingerprint recognition as an alternative to entering passwords in certain apps.*



*You can also use your fingerprint to verify your identity when logging in to your Samsung account.*

## Register a Fingerprint



You can register up to 3 fingerprints. A password will also set up as an alternative to your fingerprint.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Finger Scanner** > **Fingerprint manager**.
  - If no fingerprints are registered, the manager automatically opens the **Register fingerprint** screen. To add a fingerprint, tap  **Add** and follow the instructions to register a fingerprint and password.
  - To rename a fingerprint, touch and hold the fingerprint, and then touch  **Edit**.
  - To delete a fingerprint, touch and hold the fingerprint, and then touch  **Done**.

## Change Your Backup Password

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Finger Scanner** > **Change backup password**.
3. Enter your fingerprint or password.



## Additional Settings

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Finger Scanner** for options.
  - **Screen lock:** Change your Screen lock and access Screen lock settings. For more information, see [Lock Screen](#).
  - **Web sign-in:** Sign in to websites by placing any of your registered fingers over the home key.
  - **Verify Samsung account:** Verify your identity using your fingerprint when logging in to your Samsung account.
  - **Pay with PayPal:** Link your PayPal account to your device to make faster and more secure PayPal payments using any of your registered fingerprints.

# Motions and Gestures

---

*Control certain device actions by touching the screen with the palm of your hand.*



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Motions and gestures**.
3. Tap each of the following and then tap **ON/OFF** to enable:
  - **Direct call:** Call the contact whose call log, message, or contact details are currently on the screen by bringing the device close to your ear.
  - **Smart alert:** Set the device to vibrate when you pick it up to notify you about missed calls and messages.
  - **Mute/pause:** Mute or pause sounds and video by covering the screen or turning over the device.
  - **Palm swipe to capture:** Capture an image of the screen when you sweep your hand left or right across the screen. The screenshot is saved to the clipboard and to the Screenshots folder in the Gallery app.

# S Pen Settings

---

## *Configure options and settings for the S Pen.*

### To configure settings for the S Pen:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **S Pen** and configure any of the following settings:
  - **Air command:** Enable or disable the Air Command menu, a feature of the S Pen. The Air Command menu provides quick access to S Pen applications from any screen. Tap **ON/OFF** to either enable or disable the Air Command menu.
  - **Air view:** Preview information, extend text, or enlarge pictures by hovering your finger over the screen. Tap **ON/OFF** to turn the feature on. Tap an option and tap **ON/OFF** to turn each option on or off.
  - **Pointer:** Turn the pointer on or off. The pointer appears on the screen when the tip of the S Pen is hovering close enough. Holding the pointer over some features can reveal what an item is or what it does.
  - **Direct pen input:** Turn the Direct pen input feature on or off. This feature allows you to switch from the keyboard to the S Pen when filling in form fields.
  - **S Pen alerts:** Tap the check box to set your device to sound an alert and show a pop-up if you forget to attach the S Pen and walk away from it with your device.
  - **Disable pen detection:** Turn off pen detection when the S Pen is attached. This can help extend battery life.
  - **S Pen sound:** Tap **ON/OFF** to enable sounds when writing with the S Pen.
  - **S Pen vibration feedback:** Activate vibration feedback when writing with the S Pen.

- **Detachment options:** Select an action for the device to take when the S Pen is detached from the device.
- **Attach/detach sound:** Select a sound for the device to make when the S Pen is detached from the device.
- **Attach/detach vibration:** Activate vibration feedback when the S Pen is attached and detached.

For more information on using the S Pen, see [S Pen](#).



# Accounts

---




*Set up and manage accounts, including your Google Account, Samsung account, email, and social networking accounts.*

*Depending on the account, you can choose to synchronize your calendar, contacts, and other types of content.*

## Add an Account

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap **Add account**.
3. Tap one of the account types.
4. Follow the prompts to enter your credentials and set up the account.



## Synchronize Accounts

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap **(account type)**.
3. Tap an account to view the sync settings for that account.
  - Check individual data items to sync.
  - Tap  **Sync** to synchronize the account.




## Account Settings

Each account has its own set of settings. In addition, you can configure common settings for all accounts of the same type.

**Note:** Account settings and available features vary between account types and service providers. Contact your service provider for more information on your account's settings.

1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap **(account type)**.
  - Tap an account to configure that account's settings.
  - Tap **Settings** or other available options to configure common settings for all accounts of this type.

## Delete an Account



1. From a Home screen, tap  **Apps** >  **Settings** > **Accounts**.
2. Tap **(account type)**.
3. Tap the account, and then tap  **More options** > **Remove account**.
4. Enter the account password and tap **Confirm**.
5. At the prompt, tap **Remove account**.

# Cloud

---



*Back up your personal data using your Samsung Account or Dropbox.*

## Using Your Samsung Account

1. From a Home screen, tap  **Apps** >  **Settings** > **Cloud**.
2. Tap your Samsung account to manage your sync settings and backup options.
  - If you have not signed in to your Samsung Account, tap **Add Samsung account**.
  - Tap **Storage usage** to show the storage used and remaining storage available.
  - Tap **Sync settings** to select which data to sync.
  - Tap **Backup** to manage your back up and restore options.
  - Tap **Restore** to retrieve data from your Samsung account.

## Using Your Dropbox Account

For more information about Dropbox, visit [dropbox.com](https://dropbox.com).

1. From a Home screen, tap  **Apps** >  **Settings** > **Cloud**.
2. Tap your Dropbox account to manage your sync settings and backup options.
  - If you have not signed in to your Dropbox account, tap **Link Dropbox account**.
  - Follow the prompts to set up and use Dropbox.





# Backup and Reset

---

*Back up your data to Google servers. You can also reset your device to its factory defaults.*

## Backup and Restore



Enable backup of your information to Google servers.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Backup and reset** for options:
  - **Back up my data:** Enable back up of application data, Wi-Fi passwords, and other settings to Google servers.
  - **Backup account:** Select a Google account to be used as your backup account.
  - **Automatic restore:** Enable automatic restoration of settings from Google servers. When enabled, backed-up settings are restored when you reinstall an application.

## Factory Data Reset



Return your device to its factory defaults.

**Warning!** This action permanently erases ALL data from the device, including Google or other account settings, system and application data and settings, downloaded applications, as well as your music, photos, videos, and other files.

1. From a Home screen, tap  **Apps** >  **Settings** > **Backup and reset**.
2. Tap **Factory data reset**.
3. Tap **Reset device** and follow the prompts to perform the reset.

## Collect Diagnostics

This feature collects diagnostic data from your device so that T-Mobile technicians can better troubleshoot issues with your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Backup and reset**.
2. Tap **Collect diagnostics**.
3. Tap **Diagnostics** and read the onscreen information. Choose to enable or disable the feature by placing a check mark in the **Allow Diagnostics** check box.



Tap **More info** to display additional information or tap **Next** to display the Issue Assist screen.

4. Tap **Issue Assist** and read the onscreen information. Tap **Accept** or **Decline**.
5. Tap **Special Offers** and read the onscreen information. Tap **Accept** or **Decline**.



# Language and Input Settings

*Configure your device's language and input settings.*

## Set Your Default Language

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Language**.
3. Select a language from the list.




## Select Your Default Keyboard or Input Method

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Default**.
3. Select a keyboard.

**Note:** Additional keyboards can be downloaded from the Google Play Store.

## Samsung Keyboard Settings

Configure options for using the Samsung keyboard.




1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Tap  **Settings** next to Samsung keyboard for options:
  - **Select input languages:** Choose which languages are available on the keyboard. To switch between languages, slide the space bar sideways.
  - **Predictive text:** Allow Predictive text to suggest words matching your text entries, and, optionally, complete common words

automatically. Predictive text can learn your personal writing style from your contacts, messages, Gmail, and social networking sites—improving its accuracy of predicting your text entries.

- **Auto replace:** Tap the space bar to replace words.
- **My hot keys:** Turn on to enter up to 10 shortcuts using the number keys.
- **Auto capitalize, Auto spacing, and Auto punctuate:** Tap the check box next to these features to automatically apply them while you type.
- **Keyboard swipe:** Select options for entering text by swiping across the keyboard.
- **Sound, Vibration, Character preview:** Tap the check box next to these feedback features to apply them while typing.
- **Pen detection:** Tap the check box to have the handwriting pad appear when using the S Pen to write.
- **Reset settings:** Reset the settings for the Samsung keyboard.



## Google Voice Typing Settings

Speak rather than type your text entries using Google Voice Typing.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Tap  **Settings** next to Google voice typing for options:
  - **Choose input languages:** Select languages for Google voice typing.
  - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
  - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.


## Handwriting Recognition Language



Handwriting can be recognized in S Note and Action Memo. Use this option to select a language that will be used by the device to recognize your handwriting.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input**.
3. Under HANDWRITING RECOGNITION, tap **Language**.
4. Tap **More languages** to select a new language.

## Voice Search




Use Google voice recognition to perform Google searches using spoken commands.

To perform a voice search, tap  in the Google search bar or widget. Or say “Ok Google” to launch a Google search (if the hotword detection option is enabled).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Voice search** for options.
  - **Language:** Select languages for Google voice typing.
  - **Speech output:** Select options for spoken feedback.
  - **“Ok Google” Detection:** Tap to launch a Google search whenever you say “Ok Google”.
  - **Offline speech recognition:** Download and install speech recognition engines, allowing you to use voice input while not connected to the network.
  - **Block offensive words:** Hide words many people find offensive are in results of Google voice searches. Offensive words are replaced in results with a placeholder (####).
  - **Bluetooth headset:** Use audio input from a Bluetooth headset, if one is connected.



## Text-To-Speech Options

Configure your Text-To-Speech (TTS) options. TTS is used for various accessibility features, such as TalkBack. For more information, see [Accessibility](#).

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Text-to-speech options** for options:
  - Choose either the Samsung or Google text-to-speech engine. Tap  **Settings** next to each TTS engine for options.
  - **Speech rate**: Set the speed at which the text is spoken.
  - **Listen to an example**: Play a sample of speech synthesis (available if voice data is installed).
  - **Default language status**: Display the default language in use.



## Read New Notifications Aloud

Set the device to read new notifications aloud for incoming calls, messages, and emails, as well as caller or sender information.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Read notifications aloud**.
3. Touch a check box to enable each option.

## Mouse/Trackpad Settings

Configure settings for using an optional mouse or trackpad (not included).



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Language and input** > **Pointer speed**.
3. Drag the slider to set the speed of the pointer.
4. Touch **OK** to save your setting.

# Date and Time Settings

---

*By default, your device receives date and time information from the wireless network.*

*When you are outside network coverage, you may want to set date and time information manually using the date and time settings.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Date and time**. The following options appear:
  - **Automatic date and time**: Tap the check box to use the time on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the date and time.
  - **Set date**: Tap to manually set the date. This option is locked if **Automatic date and time** is enabled.
  - **Set time**: Tap to manually set the time. This option is locked if **Automatic date and time** is enabled.
  - **Automatic time zone**: Tap the check box to use the time zone detected on the mobile and/or Wi-Fi network. If this option is checked, you cannot manually set the time zone.
  - **Select time zone**: Tap to manually set the time zone. This option is locked if **Automatic time zone** is enabled.
  - **Use 24-hour format**: Tap to use 24-hour format (as opposed to 12-hour with AM and PM).
  - **Select date format**: Tap to choose your preferred date format.

# Safety Assistance



---

*Receive real-time information about emergencies and severe weather conditions.*

*You can also enable Emergency mode: a power-conserving mode that restricts certain apps and functions while allowing access to Messages, Contacts, and emergency calls.*



## Emergency Mode

Use Emergency mode to conserve battery power during emergencies. Power-hungry apps and functions are disabled, but you are still able to send messages, use Contacts, and make emergency calls.

1. From a Home screen, tap  **Apps** >  **Settings** > **Safety Assistance**.
2. Tap **Emergency mode**.
3. Tap **ON/OFF** to turn the feature on.

## Geo News



Receive information about weather, environmental situations, and geological information for your location during emergencies.

1. From a Home screen, tap  **Apps** >  **Settings** > **Safety Assistance**.
2. Tap **Geo News**.
3. Tap **ON/OFF** to turn the feature on.
4. Tap **Geo News notification pop-ups** to receive pop-up alerts.

## Send Help Messages

Send a quick alert to your primary contacts when you are in an emergency situation.

**To enable this feature:**



1. From a Home screen, tap  **Apps** >  **Settings** > **Safety Assistance**.
2. Tap **Send help messages**.
3. Tap **ON/OFF** to turn the feature on.
  - **Send pictures:** Send photos taken with the front and back cameras to your emergency contacts.
  - **Send sound recording:** Send a short audio message to your emergency contacts.

**To send a help message:**

- Press the **Power/Lock** key quickly three times.

## Manage Primary Contacts



Select contacts or create new ones to be your emergency contacts. These contacts automatically receive your help message.

1. From a Home screen, tap  **Apps** >  **Settings** > **Safety Assistance**.
2. Tap **Manage primary contacts**.
3. Tap **Create primary contact** and choose one of the following options:
  - **Create contact:** Enter a name and phone number for a new emergency contact.
  - **Select from contacts:** Designate a contact to be an emergency contact.

# Accessories

---




*Configure options when using HDMI audio devices (not included) or using a book cover (not included).*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Accessories** for options:
  - **Dock sound:** Play sounds when inserting and removing the device from a dock.
  - **Audio output:** Select a sound output format to use when connecting your device to HDMI devices (not included). Some devices may not support the surround sound setting.

# Battery

---

*Configure battery charging and view how battery power is used for device activities.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Battery** for options:
  - **Fast charging**: Enable fast charging mode.
  - **Show battery percentage**: Display the battery charge percentage next to the battery icon on the Status bar.
  - Tap the **Battery Chart** to see a visual of battery usage.
  - Apps and OS Usage: Battery usage displays in percentages per application.
    - Tap **Screen**, **Android System**, **Android OS**, or an app to view they are affecting battery use.
  - Tap  **Refresh** to update the listing.

**Note:** Other applications may be running that affect battery use.





# Power Saving

---

*Conserve battery power by automatically adjusting the screen brightness, limiting the performance of the CPU, and other power reduction activities.*

*Ultra power saving mode saves even more battery power by using a gray scale theme on the Home screen and limiting the number of usable apps.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Power saving** for options:
  - **Power saving mode**: Tap **ON/OFF** to turn the feature on. Tap **Power saving mode** to select options.
  - **Ultra power saving mode**: Tap **ON/OFF** to turn the feature on. Tap **Ultra power saving mode** for options.

**Tip:** Tap  **More options** > **Help** to display more information about conserving power.



# Storage

---


*View the device memory and usage, or mount, unmount, or format an optional memory card (not included).*

## Device Memory

View and manage the memory used by the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage**.
  - The **DEVICE MEMORY** displays Total space and Available space.
  - The amounts of memory used by Applications, Pictures and videos, Audio, Downloads, Cached data, and Miscellaneous files are also displayed.

### To increase available memory:

 
1. Tap **Cached data** to clear all cached data for all apps.
2. Tap **Miscellaneous files**, select unnecessary files (or tap **Select all**), and then tap  **Delete**.

## Memory Card (SD Card)

Once an optional memory card (not included) has been installed in your device, the card memory displays as Total space and Available space.

### *Install a Memory Card*

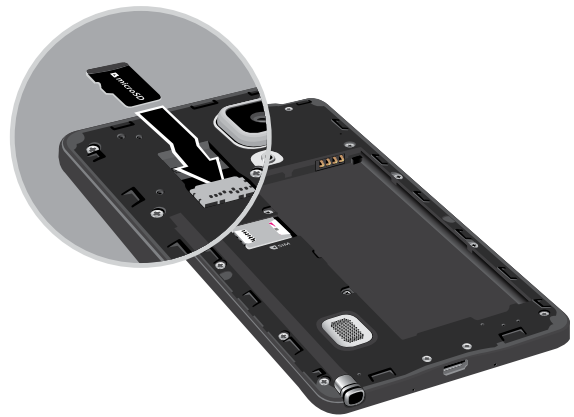

You can use an optional microSD or microSDHC card (not included) to add additional memory space to your device.



1. Remove the back cover. For more information, see [Remove the Back Cover](#).
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.
3. Replace the back cover. For more information, see [Replace the Back Cover](#).

## Mount a Memory Card



When you install an optional memory card, it is automatically mounted (connected to the device) and prepared for use. However, should you unmount the card without removing it from the device, you will need to mount it before it can be accessed.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Mount SD card**.

## Unmount an SD Card



To prevent damage to information stored on the memory card, always unmount the card before removing it from the device.

Unmounting an SD card may stop some applications from functioning until you mount the SD card again.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Unmount SD card**.



## Remove a Memory Card

**Warning!** To prevent damage to information stored on the memory card, unmount the card before removing it from the device.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Unmount SD card**.
3. Open the memory card slot cover and turn to expose the slot.
4. Gently press inward on the memory card so that it pops out from the slot and carefully pull the card out.
5. Close the memory card slot cover.

## Formatting an SD Card

**Warning!** When formatting an SD card, you should backup your music and photo files that are stored on the card because formatting the SD card deletes all the stored data.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Storage** > **Format SD card** and follow the prompts.

# Security

*Secure your device and protect your data with Security settings.*

## Device Administration



Manage your device administrators and application installation privileges.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
  - **Device administrators:** Add or remove device administrators.
  - **Unknown sources:** Enable installation of non-Google Play applications.
  - **Verify apps:** Block or warn before installing apps that may cause harm.

**Warning!** Enabling installation of third-party applications can cause your device and personal data to be more vulnerable to attacks by unknown sources.

## Encrypt Your Data

Require a numeric PIN or password to decrypt your device each time you power it on or encrypt the data on a memory card (not included) each time it is connected.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
  - Tap **Encrypt device** and follow the prompts to encrypt all data on your device.
  - Tap **Encrypt external SD card** to encrypt data on a memory card (not included).

**Note:** Make sure your battery is charged more than 80 percent. Encryption takes an hour or more.

## Locate a Lost Device



Protect your device from loss or theft allowing your device to be locked, tracked, and for your data to be deleted remotely.

**Note:** You must sign up for a Samsung account and enable Google location service to use Remote controls.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Remote controls** and follow the prompts to set up Remote controls.

## Receive an Alert When Your SIM Card Is Changed

Prevent unauthorized changes to your SIM card by being alerted whenever an app or service attempts to change data on your SIM card.



1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **SIM change alert** and follow the prompts.

## Find My Mobile Web Page

- To access your device remotely, visit [findmymobile.samsung.com](http://findmymobile.samsung.com).



## Prevent Others From Reactivating Your Device

Stop others from reactivating your device after it has been reset remotely.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Reactivation lock** to enable the feature.



## Set Up or Change Your SIM Card Lock

Use this option to set up your password when one is first required or change your current password.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Set up SIM card lock** and follow the prompts.



## View Passwords

Display password characters briefly as you type them.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** > **Make passwords visible** to turn the feature on.



## Security Update Service

Automatically receive security updates.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
  - **Security policy updates:** Automatically or manually check for security policy updates.
  - **Send security reports:** Send security reports to Samsung via Wi-Fi for threat analysis.

## Credential Storage



Manage your security certificates. If a certificate authority (CA) certificate gets compromised or for some other reason you do not trust it, you can disable or remove it.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Security** for options:
  - **Storage type:** Select a storage location for credential contents.
  - **Trusted credentials:** Display certificates in your device's ROM and other certificates you have installed.
  - **Install from device storage:** Install a new certificate from storage.
  - **Clear credentials:** Erase the credential contents from the device and reset the password.

# Help

---



*View tips and guidelines for using your device.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **Help** for information about new features, getting started, applications, settings, and so on.

# About Your Device



---

*View information about your device, including status, legal information, hardware and software versions, and a tutorial.*

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **About device**, and then tap items for more details:
  - **Software updates:** Check for and install available software updates.
  - **Status:** View the status of the battery, network, and other information about your device.
  - **Legal information:** View your device's open source licenses and Google legal information.
  - **Device name:** View and change your device's name.
  - Additional device information includes the Model number, Android version, Build number, and more.

## Software Update

Use Software update to update your device's software.

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap **About device** > **Software updates**.
3. Follow the prompts to check for available software updates to download and install.



# Application Manager

*You can download and install new applications on your device. Use Application manager settings to manage your downloaded and preloaded applications.*

**Warning:** Because this device can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

## Memory Usage





See how memory is being used by Downloaded or Running applications.

1. From a Home screen, tap  **Apps** >  **Settings** > **Application manager**.
2. Swipe across the screen to display DOWNLOADED, SD CARD, RUNNING, or ALL memory usage for that category of applications.

The graph on the DOWNLOADED tab shows used and free device memory. The graph on the RUNNING tab shows used and free RAM.

## Downloaded





Displays apps you have downloaded onto your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Application manager**.
2. Tap **DOWNLOADED** to view a list of all the downloaded applications on your device.
  - To switch the order of the DOWNLOADED list, tap  **More options** > **Sort by size**.
  - To reset all of your application preferences, tap  **More options** > **Reset app preferences**.
  - Tap an application to view and update information about the application, including memory usage, default settings, and permissions. The following options are displayed:
    - **Force stop:** Stop an app that is misbehaving. Restart your device if stopping an app, process, or service causes your device to stop working correctly.
    - **Uninstall:** Delete the application from the device.
    - **Move to SD card:** Move this app to your microSD card.
    - **Clear data:** Clear application data from memory.
    - **Clear cache:** Clear an application's temporary memory storage.
    - **Clear defaults:** Clear an application's customization.
    - **Permissions:** View information about the application's access to your device and data.



## SD Card



Displays apps you have downloaded onto your memory card (not included).

1. From a Home screen, tap  **Apps** >  **Settings** > **Application manager**.
2. Tap **SD CARD** to view a list of all the downloaded applications on your SD card.
  - To switch the order of the SD CARD list, tap  **More options** > **Sort by size**.
  - To reset your application preferences, tap  **More options** > **Reset app preferences**.
3. Tap an application to view and update information about the application, including memory usage, default settings, and permissions.

**Note:** When you reset app preferences, you will not lose any app data.

## Running Services

View and control services running on your device.

1. From a Home screen, tap  **Apps** >  **Settings** > **Application manager**.
2. Tap **RUNNING** to view a list of running services.

All the applications that are currently running on the device display.
3. Tap **Show cached processes** to display all the cached processes that are running. Tap **Show services in use** to switch back.
4. Tap one of the applications to view application information.
  - **Stop:** Stops the application from running on the device. This is usually done prior to uninstalling the application. (Not all services can be stopped. Stopping services may have undesirable consequences on the application or Android System.)
  - **Report:** Report failure and other application information.



**Note:** Options vary by application.

# Default Applications

---

*If you have multiple applications of the same type, such as email apps, you can select one app to be the default.*

*You can also use a simpler Home screen which provides an easier user experience for first-time smartphone users.*



1. From a Home screen, tap  **Apps** >  **Settings** > **Default Applications**.
2. Tap **Home** and select a Home screen mode:
  - **TouchWiz easy home**: Provides an easier user experience for the first-time smartphone users.
  - **TouchWiz home**: The Home screen that originally displays on your phone.
3. Tap **Messages** and select a default messaging app.
4. To clear defaults you have set up, tap **Clear**.

# Application Settings

---

*The settings for various apps are available in one convenient location.*

To quickly access the settings for Calendar, Call, Contacts, Email, Gallery, Internet, Messages, or S Voice:

1. From a Home screen, tap  **Apps** >  **Settings**.
2. Tap one of the following to display the settings for the selected app:
  - **Calendar:** For more information, see [Calendar Settings](#).
  - **Call:** For more information, see [Call Settings](#).
  - **Contacts:** For more information, see [Contact Settings](#).
  - **Email:** For more information, see [Email Settings](#).
  - **Gallery:** For more information, see [Gallery](#).
  - **Internet:** For more information, see [Internet](#).
  - **Messages:** For more information, see [Messages Settings](#).
  - **S Voice:** For more information, see [S Voice](#).